



**GAI-TRONICS®**  
A HUBBELL COMPANY

# Addendum to Model 709-901 SmartSeries Handset/Speaker Amplifier

## Confidentiality Notice

This manual is provided solely as an operational, installation, and maintenance guide and contains sensitive business and technical information that is confidential and proprietary to GAI-Tronics. GAI-Tronics retains all intellectual property and other rights in or to the information contained herein, and such information may only be used in connection with the operation of your GAI-Tronics product or system. This manual may not be disclosed in any form, in whole or in part, directly or indirectly, to any third party.

## Procedure

Your Model 709-901 Handset/Speaker Amplifier comes equipped with a 61504-121 Plug Assembly installed on P2. This plug assembly must be removed and discarded when the Model 709-901 is used in conjunction with the Model 708 or 7085 Series Handset Station Enclosures. Use extra care not to damage the protruding latch wings of connector J2 located on the bottom edge of the amplifier during installation.

This plug assembly must be allowed to remain in place when the Model 709-901 is used with Model 707 Series Speaker Amplifier Enclosures. Refer to Figure 1 below:

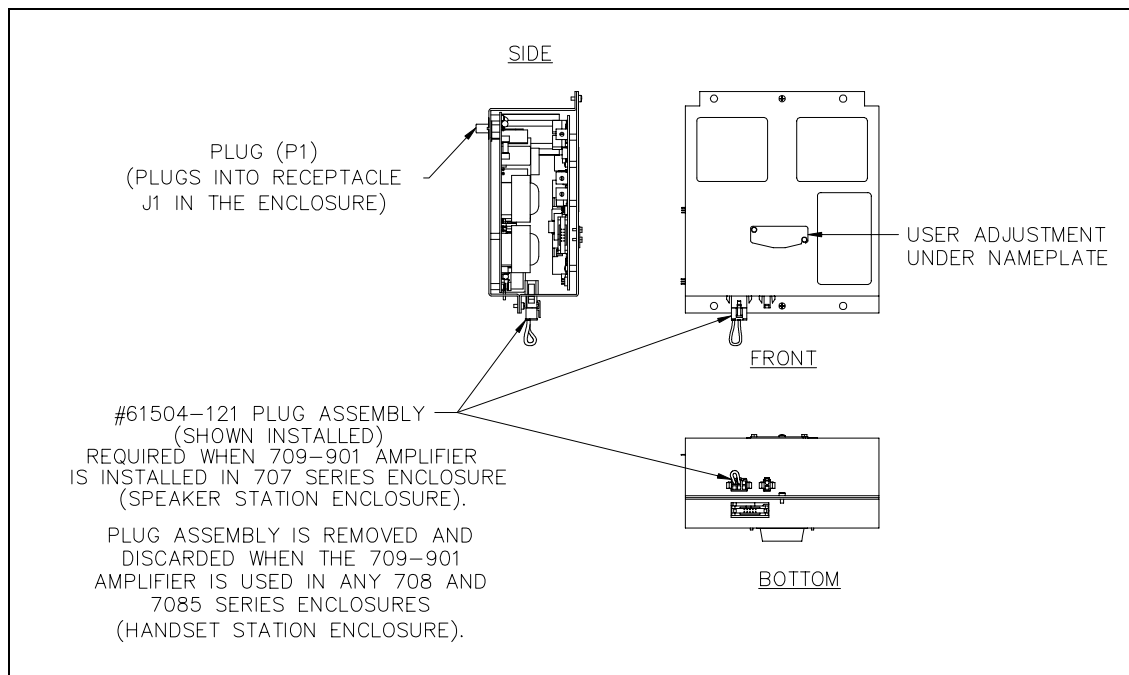


Figure 1.

## Supplemental Information

### Reference Documentation

For additional information, please refer to Pub. 42004-699L2, Model 709-901 SmartSeries Handset/Speaker Amplifier Manual.