



**GAI-TRONICS® CORPORATION**  
A HUBBELL COMPANY

# Model XGM003A Gooseneck Microphone

## Field Installation Kit Instructions

### Confidentiality Notice

This manual is provided solely as an operational, installation, and maintenance guide and contains sensitive business and technical information that is confidential and proprietary to GAI-Tronics. GAI-Tronics retains all intellectual property and other rights in or to the information contained herein, and such information may only be used in connection with the operation of your GAI-Tronics product or system. This manual may not be disclosed in any form, in whole or in part, directly or indirectly, to any third party.

### General Information

The Model XGM003A Gooseneck Microphone Kit includes the following components:

Qty	Description
1	Gooseneck Microphone assembly
2	#10-32 Phillips screws

### Installation



**Warning:** Observe precautions for handling electrostatic sensitive devices.

1. Mount the gooseneck microphone assembly to the left side of the ICP9000 Series Desktop Console by attaching the mounting bracket to the underside using the supplied #10-32 screws. See Figure 1.
2. Plug the RCA phono connector into the rear of the console at the MIC jack.

**Note:** If desired, the gooseneck microphone can be attached to the right side of the ICP9000 Series Desktop Console as follows:

1. Remove the screw securing the mounting bracket and move the bracket to the second cut-out. See Figure 2.
2. Then reattach the screw. This reverses the mounting. The gooseneck microphone can now be mounted to the right side.

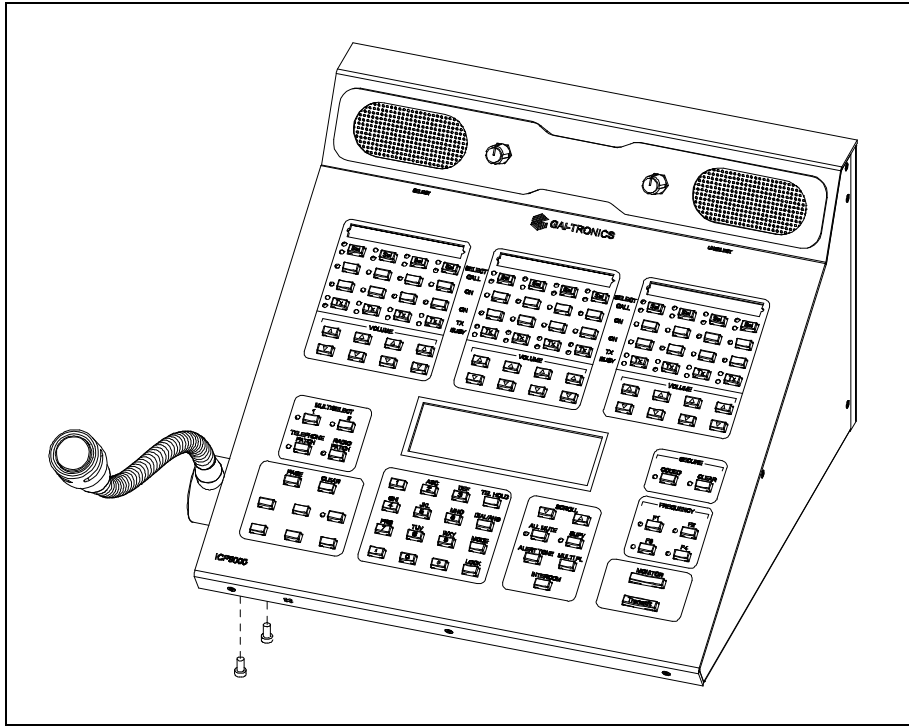


Figure 1.

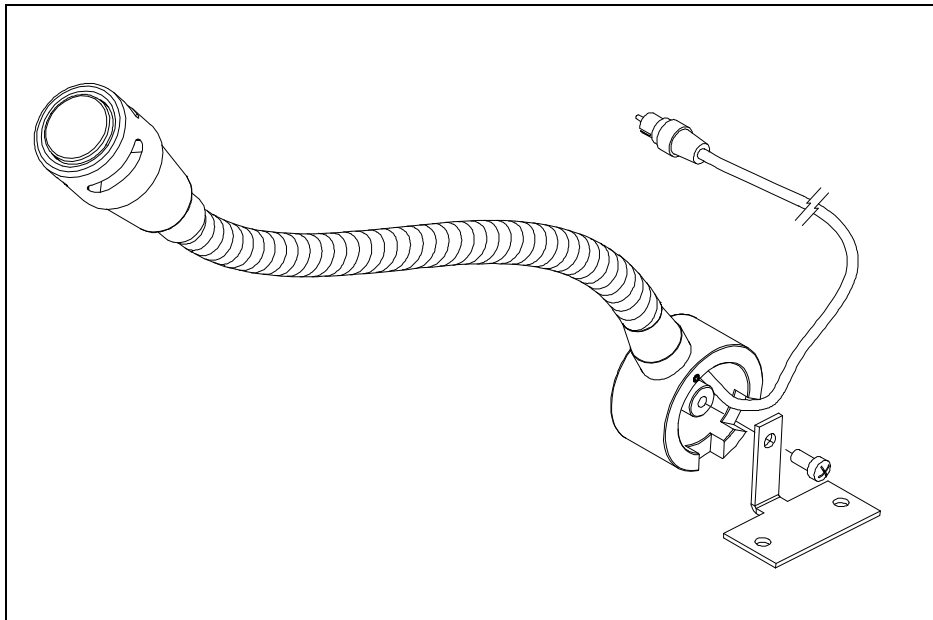


Figure 2.