

CLEAN PHONE® VOIP TELEPHONE



Typical installation locations include:

- Hospital rooms (OR/ER)
- Drug manufacturing facilities
- Food processing facilities
- Semi-conductor manufacturing facilities

- VoIP design, SIP compatible
- Web page configuration
- PoE or external 24-48 V dc power
- Real-time alarm reporting via email
- RJ45 direct connection
- Three auto-dial numbers allow quick communication at the touch of a button
- Completely smooth front panel is sealed with an overlay that keeps the phone particulate-free and makes cleaning quick and easy
- Oversized buttons with clearly marked functions permit operation for gloved hands
- Auto-answer feature
- Multi-cast (up to 8 addresses) or peer-to-peer capable
- Four inputs and two volt-free outputs for peripheral control
- Flush or Surface-mount model
- Automatic call divert (rollover), via memory list
- Compatible with TMA software for usage and maintenance
- CE / ROHS Compliant

The VoIP Clean Phone® offers hands-free communications over an existing VoIP network for clean room environments. These telephones are intended for connection via RJ45 to a 10/100 BaseT Ethernet and operate using either PoE or an external dc power source. The VoIP Clean Phone® features alarm reporting that enables system supervisors to monitor the telephone's activity and address maintenance issues immediately. The Clean Phone is also compatible with GAI-Tronics' TMA (Telephone Management Application) software for maintenance monitoring from a central location. Embedded web pages permit access to each telephone, via a browser such as Internet Explorer®, to view, monitor, and change settings within the unit.

The VoIP Clean Phone® graphic overlay is designed to withstand exposure to many chemicals. Please contact the factory for questions pertaining to chemicals not listed below:

Ajax / Vim in solution	Caustic soda (<40%) ¹	Glycerine	Paraffin oil	SBP 60/95 ¹
Alkalicarbonate solution ¹	Cutting oil	Glycol	Persil powder in solution ¹	Sulfuric Acid (<10%)
Ammonia (<40%)	Cyclohexanol	Gumption ¹	Petroleum spirit ¹	Tomato Ketchup
Acetic Acid (50%)	Diacetone alcohol	Hydrochloric acid (<36%)	Phosphoric acid (<30%)	Trichloroacetic acid (<50%)
Ariel powder in solution ¹	Diesel	Linseed Oil	Potassium ferricyanide	White Spirit
Bleach ¹	Downey / Lenor ¹	Methanol	Potassium hydroxide (<30%)	Windex ¹
Castor oil	Ethanol	Nitric Acid (<10%)	Pure Turpentine	Wisk

The VoIP CLEAN PHONE® graphic overlay is NOT resistant to the following:

Concentrated Mineral acids	High pressure steam at over 100°C	Methylene chloride
Concentrated caustic solution	Benzyl alcohol	UV
Dimethylformamide	Tetrahydrofuran	

¹Extremely faint glossing of the texture was noted.

Clean Phone® VoIP Telephone - Technical Specifications

GENERAL SPECIFICATIONS

Casing Material: Front panel: 8 mil polyester over 16-gauge stainless steel. Back enclosure: 16-gauge stainless steel

Keypad: 3x4 matrix. Push buttons: Three autodial and an off-hook indicator/switch

Temperature: Operating: -20° C to +60° C
Storage: -40° C to +70° C

Weather Resistance: Up to IP65

Relative Humidity: Up to 95%, non-condensing

External I/O: 4 configurable inputs, Output 1: 10 A @ 30 V ac/dc (resistive load)
Output 2: 50 mA @ 30 V ac/dc (resistive load)

Audio output: 85 dB SPL or greater @ 1.0 meters (@ 1 kHz)

Weight: 4.6 kg approx

Power supply: Power-over-Ethernet, 802.3af compliant (via RJ45), or External power supply 24-48Vdc, 60W.
A separate, isolated supply must be provided for each telephone.

Network: 10/100 BaseT Ethernet RJ45, Cat5 or Cat5e UTP
Static IP provisioning or DHCP

Call set-up Protocol: Session Initiation Protocol (SIP) (RFC 2361 compliant) Loose routing

Configuration: Web page, configuration file, static IP address provisioning or DHCP

Monitoring and reporting: Real-time over TCP/IP proprietary Syslog application, email embedded SMTP client Automatic fault reporting, or TMA monitoring



Multicast Capability: up to 8 addresses

Audio Path Testing: Allows remote testing of microphones and speakers, to verify that a phone is functioning acoustically. Can be run on demand or on a scheduled basis, reporting its results via Syslog and / or email.

OPTIONAL ACCESSORIES

Please ask for Brochure **B150** or visit www.gai-tronics.co.uk

DIMENSIONS

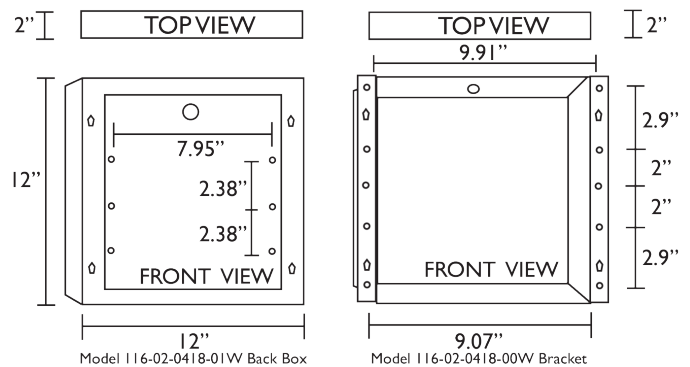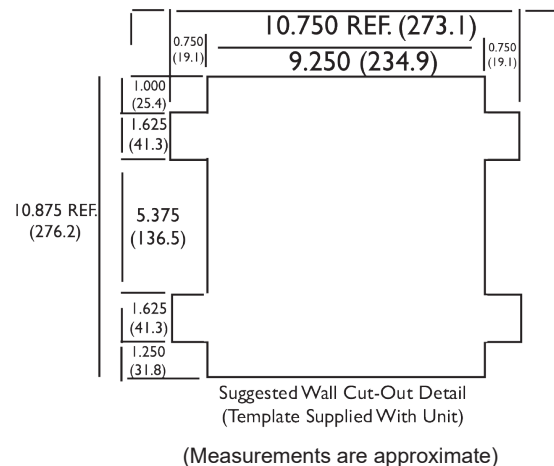

APPROVALS



This mark indicates compliance with the:
Radio & Telecommunications Terminal Equipment Directive
1999/5/EC (R&TTE)
2011/65/EC- RoHS 2 Directive



For specific country approval, please call

ORDER INFORMATION

T: +44 (0) 1283 500500 E: sales@gai-tronics.co.uk

Part Number	Description
116-02-0418-01W	Wall-mount VoIP Clean Phone (CE)
116-02-0418-00W	Flush-mount VoIP Clean Phone (CE)



UK: Tel: +44 (0) 1283 500500
USA: Tel: +1 (610) 777-1374
Italy: Tel: +39 02 4860 1460
Asia: Tel: +60-3-8945-4035
Australia: Tel: +61-28-851-5000

www.gai-tronics.co.uk
www.gai-tronics.com
www.gai-tronics.com
www.gai-tronics.com
www.austdac.com.au

