



Application Guide

M-2280B Adapter Panel

BECKWITH
ELECTRIC



A proud member of the Hubbell family.


TRADEMARKS

All brand or product names referenced in this document may be trademarks or registered trademarks of their respective holders.

The content of this Instruction Book is provided for informational use only and is subject to change without notice. Beckwith Electric has approved only the English version of this document.

Adapter Panel M-2280B

Adapts M-2001 Series Digital Tapchanger Control as a Replacement for General Electric Static LTC Transformer and Regulator Controls and some Balance Beam Models

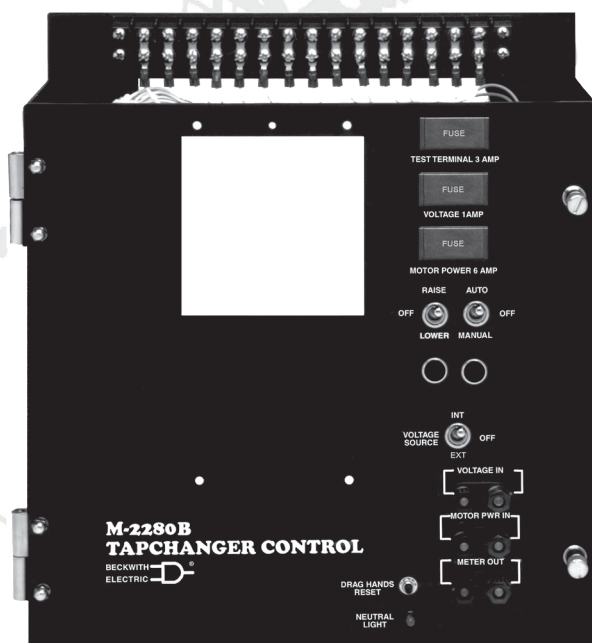

- **Connects easily to the M-2001 Series Digital Tapchanger Control using mounting screws and 24-pin connector**
- **Provides direct mechanical replacement of the existing control**
- **Provides built-in CT shorting protection when the M-2001 Series Digital Tapchanger Control is removed**
- **Optional SCADA Cutout (Local/Remote) switch (for use with SCADA enabled M-2001C controls) allows Local Blocking of SCADA commands**
- **Optional SCAMP™ (SCADA Controllable Auto/Manual Pushbutton) switch replaced AUTO/OFF/MANUAL toggle switch**
- **Optional 2 Level Local Voltage Reduction Switch**

M-2280B Adapter Panel – Specification

The M-2280B is an adapter panel which, when combined with the M-2001 Series Digital Tapchanger Control, provides convenient direct replacement for General Electric static LTC transformer and regulator controls and some balance beam models.

Interface

External connections are made to a terminal block located on the top of the rear panel of the M-2280B. Additional connections may be made to two terminal blocks located on the printed circuit board of the adapter panel. These terminal blocks provide access to auxiliary functions, including self-test alarm, user-programmable alarm, auto disable and manual raise/lower.

Features

Separate fuses for test terminal, voltage sensing and motor power are located on the front panel. Spare fuses for each are in the fuse holder.

Binding posts on the front panel allow easy connections for test procedures.

RAISE/OFF/LOWER, AUTO/OFF/MANUAL and **VOLTAGE SOURCE** switches, **DRAG HANDS RESET** button, and **NEUTRAL LIGHT** are standard.

NEUTRAL LIGHT will light to indicate that the regulator is in the neutral position, for those products equipped with a circuit for this purpose.

Options

SCADA CUTOOUT switch allows Local blocking of SCADA commands (for use with SCADA enabled M-2001C controls). The SCADA Cutout switch must be used with a M-2001 Series Control with firmware version D-0146V08.01.22 or later installed.

SCAMP™ (AUTO/MANUAL) pushbutton switch allows the Auto/Manual state on the adapter panel to be changed by a SCADA command. The SCAMP pushbutton switch must be used with a M-2001 Series Control with firmware version D-0146V08.05.XX or later installed.

Voltage Reduction switch allows 2 levels of Voltage Reduction to be selected.

Testing Specifications

High Voltage: All input and output terminals will withstand 1500 Vac rms to chassis or instrument ground for one minute with a leakage current not to exceed 25 mA, for all terminals to ground. Input and output circuits are electrically isolated from each other, from other circuits and from ground.

Surge Withstand Capability: All input and output circuits are protected against system transients. Units pass all requirements of ANSI/IEEE C.37.90.1-1989 defining surge withstand capability.

Radiated Electromagnetic Withstand Capability: All units are protected against electromagnetic radiated interference from portable communications transceivers.

Environmental

Temperature Range: Functionality is maintained from -40° to +85° C.

Humidity: Functionality is maintained under 95% relative humidity (non-condensing).

Fungus Resistance: A conformal printed circuit board coating inhibits fungus growth.

Physical

Size: 13-7/8" high x 12-7/8" wide x 5" deep (35.2 cm x 32.7 cm x 12.7 cm)

Mounting: 11" high x 8" wide (27.9 cm x 20.3 cm) 4-hole pattern for surface mounting

Approximate Weight: 6 lbs, 3 oz (2.8 kg)

Approximate Shipping Weight: 8 lbs, 3 oz (3.7 kg)

Approximate Weight with M-2001 Series Digital Tapchanger Control: 10 lbs, 8 oz (4.8 kg)

Approximate Shipping Weight with M-2001 Series Digital Tapchanger Control: 14 lbs, 3 oz (6.44 kg)

Warranty

The M-2280B Adapter Panel is covered by a five year warranty from date of shipment.

Trademarks

All brand or product names referenced in this document may be trademarks or registered trademarks of their respective holders.

Specification subject to change without notice. Beckwith Electric has approved only the English version of this document.



BECKWITH ELECTRIC

6190 118th Avenue North • Largo, Florida 33773-3724 U.S.A.

PHONE (727) 544-2326

beckwithelectricssupport@hubbell.com

www.beckwithelectric.com

ISO 9001:2015



A proud member of the Hubbell family.

WARNING

DANGEROUS VOLTAGES, capable of causing death or serious injury, are present on the external terminals and inside the equipment. Use extreme caution and follow all safety rules when handling, testing or adjusting the equipment. However, these internal voltage levels are no greater than the voltages applied to the external terminals.

DANGER! HIGH VOLTAGE



- This sign warns that the area is connected to a dangerous high voltage, and you must never touch it.

PERSONNEL SAFETY PRECAUTIONS

The following general rules and other specific warnings throughout the manual must be followed during application, test or repair of this equipment. Failure to do so will violate standards for safety in the design, manufacture, and intended use of the product. Qualified personnel should be the only ones who operate and maintain this equipment. Beckwith Electric assumes no liability for the customer's failure to comply with these requirements.



- This sign means that you should refer to the corresponding section of the operation manual for important information before proceeding.



Always Ground the Equipment

To avoid possible shock hazard, the chassis must be connected to an electrical ground. When servicing equipment in a test area, the Protective Earth Terminal must be attached to a separate ground securely by use of a tool, since it is not grounded by external connectors.

Do NOT operate in an explosive environment

Do not operate this equipment in the presence of flammable or explosive gases or fumes. To do so would risk a possible fire or explosion.

Keep away from live circuits

Operating personnel must not remove the cover or expose the printed circuit board while power is applied. In no case may components be replaced with power applied. In some instances, dangerous voltages may exist even when power is disconnected. To avoid electrical shock, always disconnect power and discharge circuits before working on the unit.

Exercise care during installation, operation, & maintenance procedures

The equipment described in this manual contains voltages high enough to cause serious injury or death. Only qualified personnel should install, operate, test, and maintain this equipment. Be sure that all personnel safety procedures are carefully followed. Exercise due care when operating or servicing alone.

Do not modify equipment

Do not perform any unauthorized modifications on this instrument. Return of the unit to a Beckwith Electric repair facility is preferred. If authorized modifications are to be attempted, be sure to follow replacement procedures carefully to assure that safety features are maintained.

PRODUCT CAUTIONS

Before attempting any test, calibration, or maintenance procedure, personnel must be completely familiar with the particular circuitry of this unit, and have an adequate understanding of field effect devices. If a component is found to be defective, always follow replacement procedures carefully to that assure safety features are maintained. Always replace components with those of equal or better quality as shown in the Parts List of the Instruction Book.

Avoid static charge

This unit contains MOS circuitry, which can be damaged by improper test or rework procedures. Care should be taken to avoid static charge on work surfaces and service personnel.

Use caution when measuring resistances

Any attempt to measure resistances between points on the printed circuit board, unless otherwise noted in the Instruction Book, is likely to cause damage to the unit.

TABLE OF CONTENTS

M-2280B ADAPTER PANEL

Application Guide

1.0	Introduction	1
1.1	Description.....	1
	Standard Features.....	1
	Control Switches.....	1
	Binding Posts.....	2
	Status Indicators.....	2
	Optional Control Switches	2
2.0	Application.....	3
	External Connections	3
	Lightning Protection.....	3
	Neutral Light Circuit.....	3
	Non-Sequential Operation (N/A for BASE-R Version)	3
	Automatic Disable Input.....	4
	Operations Counter Input	4
	Local/Remote Input	4
	Multi-Step Voltage Reduction	4
	Paralleling (N/A for BASE-RS and BASE-R Controls).....	4
	Disabling Auto/Off/Manual Toggle Switch Status Detection	4
	Operations Counter Input	5
	Connections for General Electric LTC Transformers	5
	Use of the M-0329B LTC Backup Control with the Tapchanger Control.....	5
	<i>Table 1 Multi-Step Voltage Reduction External Connections</i>	<i>5</i>
	<i>Figure 1 External Connections</i>	<i>6</i>
	<i>Figure 2 M-2001C and M-2280B Adapter Panel with Standard Auto/Off/Manual</i> <i>Toggle Switch and Optional Voltage Reduction and SCADA Cutout Switches.....</i>	<i>7</i>
	<i>Figure 3 M-2001C and M-2280B Adapter Panel with Optional SCAMP™ Auto/</i> <i>Manual Pushbutton Switch SCADA Cutout Switch and Voltage Reduction Switch</i>	<i>8</i>
	<i>Figure 4 M-2280B Wiring Harness and External Connections.....</i>	<i>9</i>
	<i>Figure 5 M-2280B Wiring Harness with optional SCAMP™ Auto/Manual</i> <i>Pushbutton switch, SCADA Cutout switch and Voltage Reduction switch.....</i>	<i>10</i>
	<i>Figure 6 Tapchanger Control and LTC Backup Control Interconnections</i>	<i>11</i>
3.0	Installation	12
3.1	Removal of the Control.....	12
3.2	Installing the M-2280B/M-2001	12
	<i>Figure 7 M-2001 Harness Connector</i>	<i>12</i>
	<i>Figure 8 M-2001 V-Notch Orientation.....</i>	<i>12</i>
3.3	Installation of the M-2280B Adapter Panel.....	13
	<i>Figure 9 Outline Dimensions</i>	<i>13</i>
	<i>Figure 10 M-2280B Hole Drill Dimensions</i>	<i>14</i>

4.0	M-2001 Tapchanger Control Software Settings	15
4.1	M-0329B LTC Backup Control Settings	15
5.0	Bench Test (M-2001 Connected to M-2280B)	16
	Test Equipment.....	16
	Setup	16
	<i>Table 2 Initial Settings</i>	16
	Procedure	16
	Resistance.....	17
	Reactance	17
	<i>Figure 11 M-2280B Test Procedure External Connection</i>	18
	Paralleling.....	19
	Voltage Source Switch.....	19
	Drag Hands Reset	19
	Counter/Neutral Light/Tap Position.....	19
	Block Raise/Block Lower/Dead Band	19
5.1	M-2001 Checkout Procedure	20
	Basic Operational Test.....	20
5.2	In-Service Test	20
5.3	M-2280B Checkout Procedure	21
	Power	21
	Voltage Source Switch.....	22
	<i>Figure 12 Setup for Current Checkout Procedure</i>	22

1.0 Introduction

The Beckwith Electric M-2280B Adapter Panel, used in conjunction with the M-2001 Tapchanger Control, uses modern electronic digital design and digital processing circuitry to achieve an overall stability and resolution unattainable with electromechanical and analog design tapchanger controls. CMOS semiconductors are used throughout the design.

1.1 Description

Standard Features

The M-2280B Adapter Panel, with the M-2001 Tapchanger Control, provides a solid-state voltage control relay designed to replace General Electric static LTC transformer controls and some balance beam models. The combination of the Tapchanger Control and Adapter Panel includes the following features:

- Voltage waveform sampling and digital processing circuitry ensure accurate rms voltage sensing in the presence of distortion on the input voltage and current.
- Control accuracy is $\pm 0.3\%$ when tested in accordance with the ANSI/IEEE C57.15.9-1999 standard over a temperature range of -30°C to $+65^{\circ}\text{C}$. The control accuracy is $\pm 0.5\%$ when tested over the full operational temperature range of -40°C to $+85^{\circ}\text{C}$.
- Input and output circuits are protected against system transients. Units pass all requirements of ANSI/IEEE C37.90.1-1989, which defines surge withstand capability. All input and output terminals will withstand 1500 Vac rms to chassis or instrument ground for one minute with a leakage current not to exceed 25 mA, for all terminals to ground. Input and output circuits are electrically isolated from each other, from other circuits and from ground.

The M-2280B Adapter Panel factory configuration for **AUTO/OFF/MANUAL** switch status detection is Enabled. The M-2280B Adapter Panel **AUTO/OFF/MANUAL** switch status detection feature is available to M-2001 series units that have Firmware Version D-0067V07.08.15 or later installed. See [Section 2.0, Application](#), Disabling **AUTO/OFF/MANUAL** Switch Status Detection, for the steps necessary to disable the **AUTO/OFF/MANUAL** switch detection function for M-2001 series units with an earlier firmware version.

Control Switches

RAISE/LOWER/OFF switch allows local manual raise and lower commands to be initiated

AUTO/OFF/MANUAL switch allows auto operation of the control or manual operation from the panel by using the Raise/Lower toggle switch. The **AUTO/OFF/MANUAL** switch status may be read by a M-2001 series control with firmware version D-0067V07.08.15 or later installed.

When the M-2001C **Input Selection 1** screen in the **Configuration** menu is set to **Switch Status Input**, the seal-in input will operate as a switch status input. All seal-in input functions will be disabled. In this mode, the switch status on the adapter panel can be read to determine if it is in Auto or Manual. The status can be read through the seal-in/switch status data point in the communications protocols.

VOLTAGE SOURCE switch in the **EXT** position disconnects the voltage transformer input and connects the **EXTERNAL POWER** binding posts to the voltage input and motor circuit.

The unit can be tested using an external 120 V RMS source of proper polarity applied to these terminals. Testing can be accomplished by adjusting the amplitude of the external source.

Drag Hands Reset pushbutton resets the tapchanger position indicator drag hands.

Binding Posts

▲ **CAUTION:** Do not reverse the ground and hot wires when connecting an external source. A 3 AG fuse (F2) is installed to protect the control from damage if these connections are accidentally reversed.

- **VOLTAGE IN** binding posts on the front panel allow application of a 120 V rms nominal voltage to the unit for test procedures.
- **MOTOR PWR IN** binding posts on the front panel allow application of a 120 or 240 V rms nominal voltage to the unit for test procedures.

■ **NOTE:** If the Motor Power Input configuration has a different return from the 120 V regulated Voltage Input, then Jumper J12 on the printed circuit board must be removed and TB1-16 should be used for the separate motor power source and return connections (See [Figure 4](#) and [Figure 5](#) for J12 location).

- **METER OUT** binding posts on the front panel allow reading of the input voltage when used in conjunction with the **BIAS TEST VOLTAGE** screen of the M-2001 Tapchanger Control.

Status Indicators

NEUTRAL light illuminates when the regulator is in the neutral tap position.

The Adapter Panel includes three replaceable fuses: Test Terminal (3 A), Voltage Sense (1 A), and Motor Power (6 A).

Optional Control Switches

VOLTAGE REDUCTION (VR1/OFF/VR2) switch allows local voltage reduction 1 or 2 to be initiated.

SCADA CUTOUT (LOCAL/REMOTE) switch allows the local blocking of SCADA commands. The SCADA Cutout switch must be used with a M-2001 Series Control with firmware version D-0146V08.01.22 or later installed.

SCAMP™ (AUTO/MANUAL) pushbutton switch allows the Auto/Manual state on the adapter panel to be changed by a SCADA command. The SCAMP pushbutton switch must be used with a M-2001 Series Control with firmware version D-0146V08.05.XX or later installed.

2.0 Application

External Connections

Power and voltage sensing are obtained either from a common source or from independent sources having a nominal 120 Vac output. Normally, this is line-to-neutral voltage, although line-to-line voltage can also be used if recognition is made of any phase shift between the voltage and current signals when using line drop compensation.

Load current must be reduced by an appropriate auxiliary current transformer to 0.2 A "full scale" before connecting to the M-2280B current inputs. The Beckwith Electric M-0121 (5.0 A to 0.2 A) or M-0169A (5.0 A or 8.66 A to 0.2 A) Auxiliary Current Transformer can be used for this purpose. The M-0121 can be used with Beckwith Electric Tapchanger Controls when the only burden present is the Line Drop Compensator circuit of the voltage regulating relay. The M-0169A is used in higher burden circuits, such as are found in paralleling schemes. Outputs of the auxiliary CTs are protected against overvoltage. For further information, obtain Beckwith Electric Application Note #17, "Basic Considerations for the Application of LTC Transformers and Associated Controls."

The external connections for the M-2280B are made to terminal block TB3 located at the top of the adapter panel. Auxiliary external connections, if needed, are made to terminal blocks TB1 and TB2 on the printed circuit board at the base of the adapter panel. The wiring harness and external connections for the M-2280B are shown in [Figure 4](#) and [Figure 5](#).

Lightning Protection

▲ CAUTION: For proper protection against system surges, chassis ground must be connected to earth ground.

It has been determined that transient voltages in excess of 1500 Vac RMS can exist on the "ground" lead normally tied to TB1-8. In the tapchanger controls, these voltages are suppressed by varistors which still permit the unit to pass a 1500 Vac hi-pot test for one minute, with a leakage of approximately 15 mA, all terminals to ground.

Multiple VT grounds far apart must be avoided, since a varying difference in ground voltage could add or subtract from the effective voltage, and cause variation in the tapchanger control's bandcenter voltage setpoint.

Neutral Light Circuit

If the Neutral Light terminal TB3-14 needs to be grounded for the light to illuminate, set switch S1 (located in the right-hand corner of the adapter panel printed circuit board) to the toggle up position. If the Neutral Light terminal TB3-14 needs to be powered for the light to illuminate, set switch S1 (located in the right-hand corner of the adapter panel printed circuit board) to the toggle down position.

Non-Sequential Operation (N/A for BASE-R Version)

The operation of the M-2280B can be interrupted during tapchanger operation by momentarily applying the "wetting" voltage of terminal TB2-28 to TB3-15 (timer reset for non-sequential operation input) through an external contact. This causes the output to de-energize and reinitialize the time delay circuit when the reset signal is removed. This function can be used to cause the LTC transformer, if so equipped, to wait for the unit to time out between tapchanges.

▲ CAUTION: Voltage applied through dry contacts to actuate non-sequential input *must* be nominal +12 Vdc obtained from pin TB2-28 of the M-2280B adapter panel. If an M-0280 analog-version tapchanger control had previously been installed, the wiring harness must be reconfigured to remove the 120 Vac "wetting" voltage obtained from TB1-9 located on the top of the rear panel of the M-0280. Carefully examine the contacts of these functions to remove 120 Vac wetting voltages.

Automatic Disable Input

To disable automatic operation of the M-2280B, remove Jumper #15 (See [Figure 4](#) and [Figure 5](#) for location) on the printed circuit board.

If SCADA is used to enable and disable this function, a contact rated at 6 A minimum can be connected between the terminals.

Auto disable may also be accomplished by closing a contact between TB1-1 and TB2-28.

Operations Counter Input

▲ CAUTION: Do not apply any voltage to this terminal.

An operations count is registered by momentarily grounding TB1-13 through an external dry contact from the load tapchanger. The input is level-sensitive. Make sure that any "wetting" voltages are removed from the counter contacts before installing the M-2280B Adapter Panel/M-2001 Tapchanger Control.

Local/Remote Input

Removing Jumper #14 (See [Figure 4](#) and [Figure 5](#) for location) prohibits M-2001 operation by disabling the automatic raise and lower outputs and also by disabling the M-2280B Adapter Panel's manual RAISE/OFF/LOWER toggle switch. Removing this jumper does not disable the SCADA-supplied motor voltage input to the manual raise/manual lower contacts on the adapter panel.

Multi-Step Voltage Reduction

On the M-2280B, TB3-10 and TB3-11 at the top of the adapter panel are used together to provide up to three levels of voltage reduction. The external connections to achieve these steps are shown in [Table 1](#) and [Figure 1](#). Voltage reduction amounts are set within the M-2001 Tapchanger Control software.

▲ CAUTION: Voltage applied through dry contacts to actuate Voltage Reduction Steps 1, 2, and 3 *must* be nominal +12 Vdc obtained from pin TB2-28 of the M-2280B adapter panel. If an M-0280 analog-version tapchanger control had previously been installed, the wiring harness must be reconfigured to remove the 120 Vac "wetting" voltage obtained from TB1-9 located on the top of the rear panel of the M-0280. Carefully examine the contacts of these functions to remove 120 Vac wetting voltages.

Paralleling (N/A for BASE-RS and BASE-R Controls)

See **M-2001C Instruction Book, Section 4.9, Parallel Operation.**

Disabling Auto/Off/Manual Toggle Switch Status Detection

The Auto/Off/Manual Toggle Switch status detection feature is available on M-2001 Series Digital Tapchanger Controls that have Firmware Version D-0067V07.08.15 or later installed. To disable the Auto/Off/Manual Toggle Switch status detection feature for earlier firmware versions, perform the following:

1. Ensure that all power is removed from the M-2280B Adapter Panel and M-2001 control.
2. From the rear of the M-2280B Adapter Panel locate ([Figure 4](#) and [Figure 5](#)) and remove the wire connected to Terminal S3-4 on the rear of the **AUTO/OFF/MANUAL** toggle switch.
3. Connect the wire removed in Step 2 to Terminal S2-4 on the rear of the **RAISE/OFF/LOWER** switch.
4. See **M-2001 Instruction Book, Section 6.1, External Connections**, for information regarding M-2001 settings to disable this function.

Operations Counter Input

▲ CAUTION: Do not apply either +12 Vdc or 120 Vac to this terminal.

An operations count is registered by momentarily grounding TB3-12 through an external dry contact from the load tapchanger. The input is level-sensitive. Make sure that any "wetting" voltages are removed from the counter contacts before installing the M-2280B Adapter Panel/M-2001 Tapchanger Control.

Connections for General Electric LTC Transformers

In general, the tapchanger motor must be operated from a different transformer than the VT used to measure regulated voltage. If this is not done, hunting at the upper band edge may result.

A typical connection for an M-2280B is shown in [Figure 2](#). Connections are simplified and may not show all functions required in a typical load tapchanging transformer control scheme; for example, seal-in contacts, limit switches, etc.

Use of the M-0329B LTC Backup Control with the Tapchanger Control


The M-0329B is a single-phase, solid-state backup control that prevents a defective tapchanger control from running the voltage outside the upper and lower voltage limits. The Block Raise and Block Lower voltage levels are set by accurately calibrated dials.

The M-0329B LTC Backup Control is connected as a two terminal device to the voltage transformer. [Figure 6](#) shows the typical interconnection of the two devices with motor auxiliary relays.

The M-0329B Instruction Book is available on request and gives added details. Please refer to the M-0329B Instruction Book for complete ordering information.

Voltage Reduction Setpoint: Multiplier Range	Apply "Wetting Voltage" from TB2-28 to Terminal #
Voltage Reduction Setpoint #1: 0 to 10%	TB3-10
Voltage Reduction Setpoint #2: 0 to 10%	TB3-11
Voltage Reduction Setpoint #3: 0 to 10%	TB3-10 and TB3-11

Table 1 Multi-Step Voltage Reduction External Connections

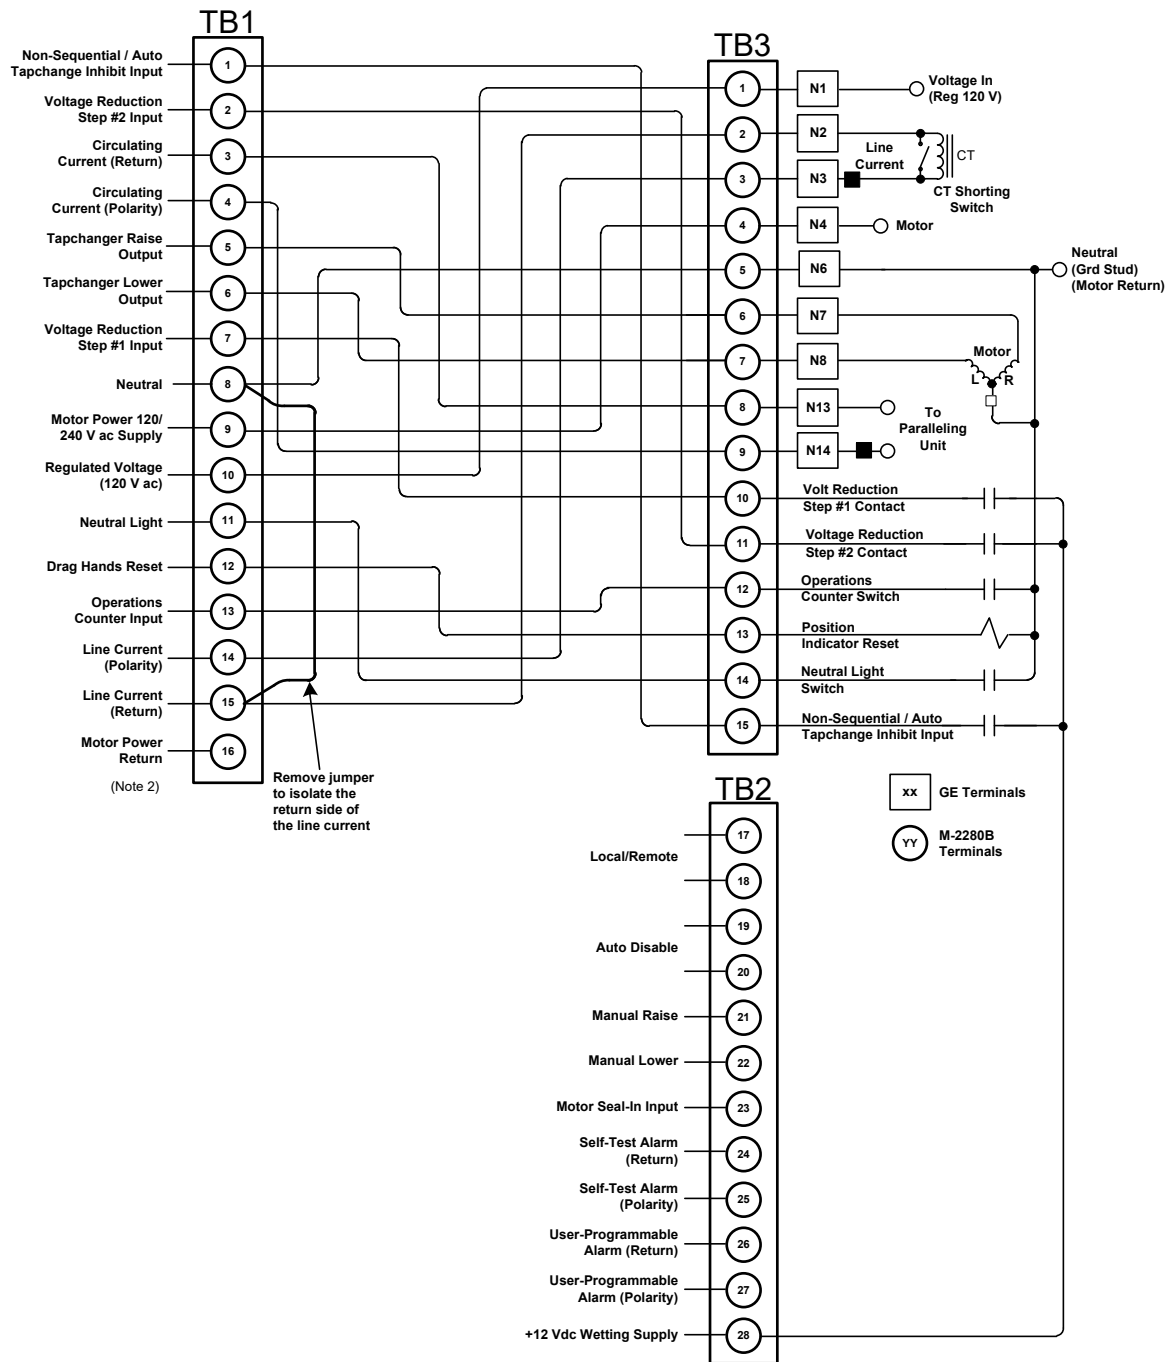

WARNING: Open CT secondary will result in high voltage at CT terminals. Death, severe injury or damage to equipment can occur. Do not operate with CT secondary open. Short circuit or apply burden at CT secondary during operation.

NOTES:

- External connections are made to TB3 located at the top of the adapter panel. Auxiliary external connections may be made to TB1 and TB2 as needed.
- If the Motor Power Input configuration has a different return from the 120 V regulated Voltage Input, then Jumper J12 on the printed circuit board must be removed and TB1-16 should be used for the separate motor power source and return connections (See [Figure 4](#) and [Figure 5](#) for J12 location).

Figure 1 External Connections


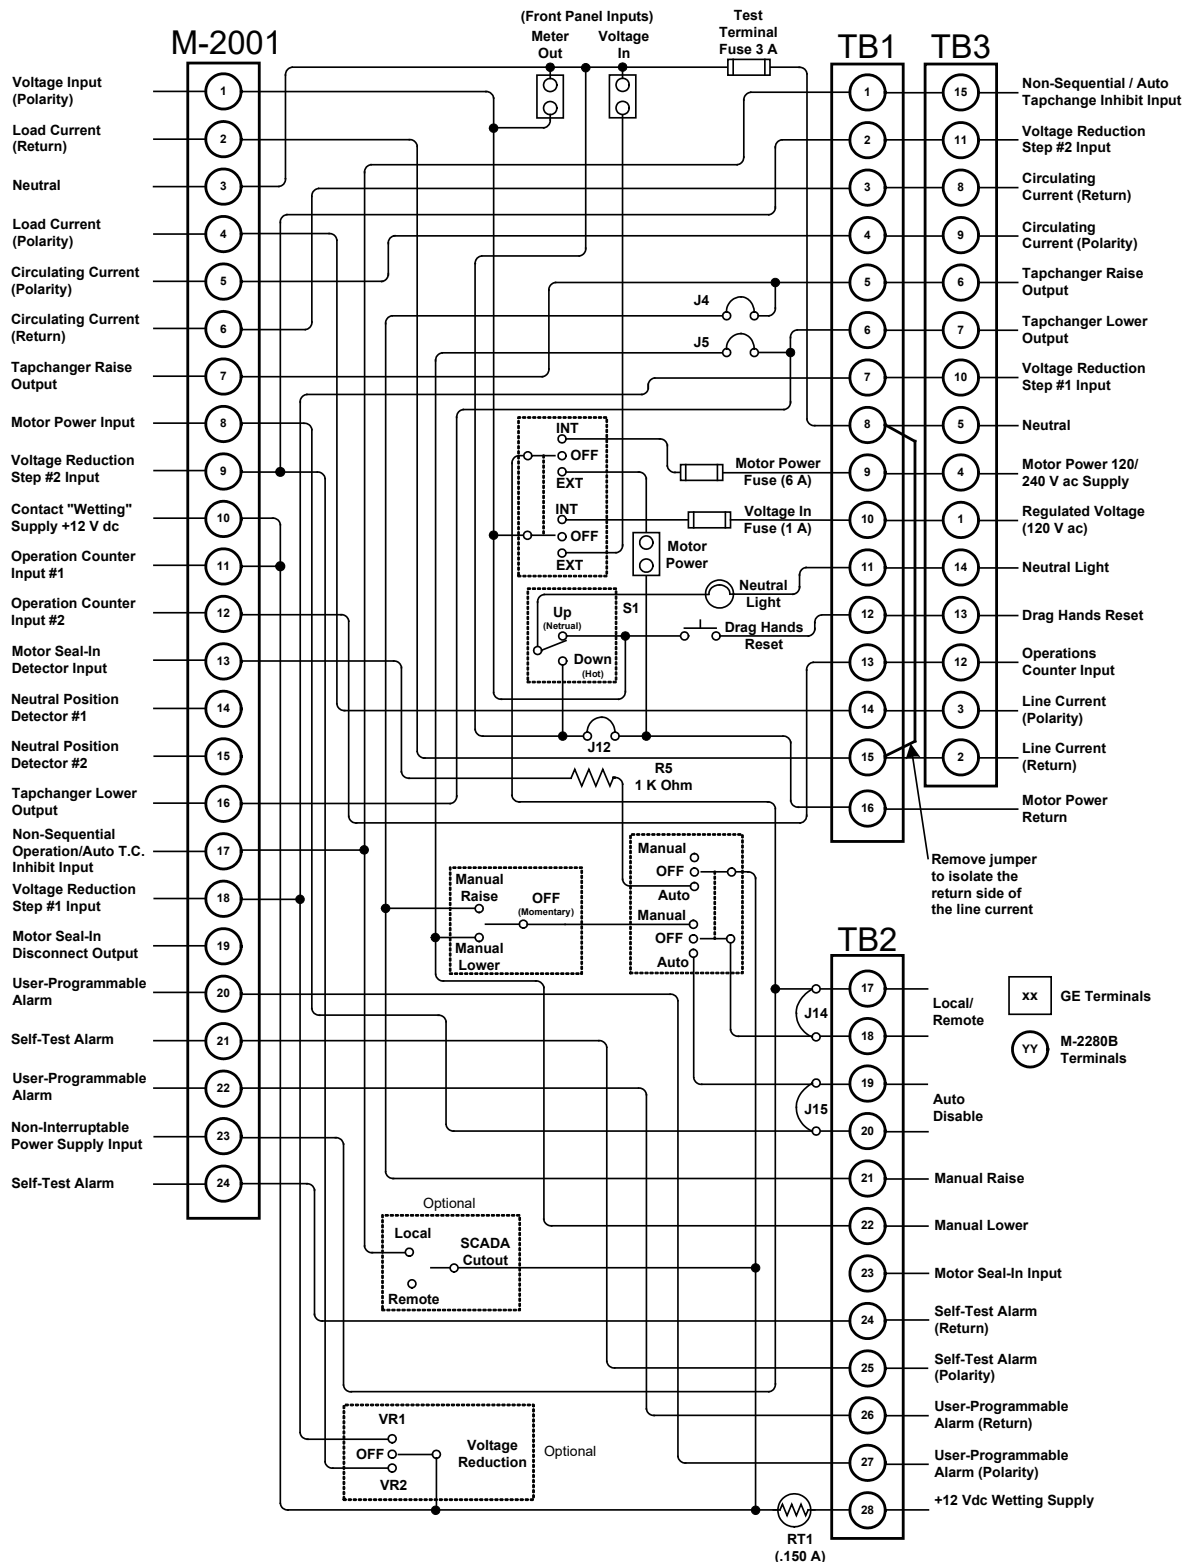


Figure 2 M-2001C and M-2280B Adapter Panel with Standard Auto/Off/Manual Toggle Switch and Optional Voltage Reduction and SCADA Cutout Switches

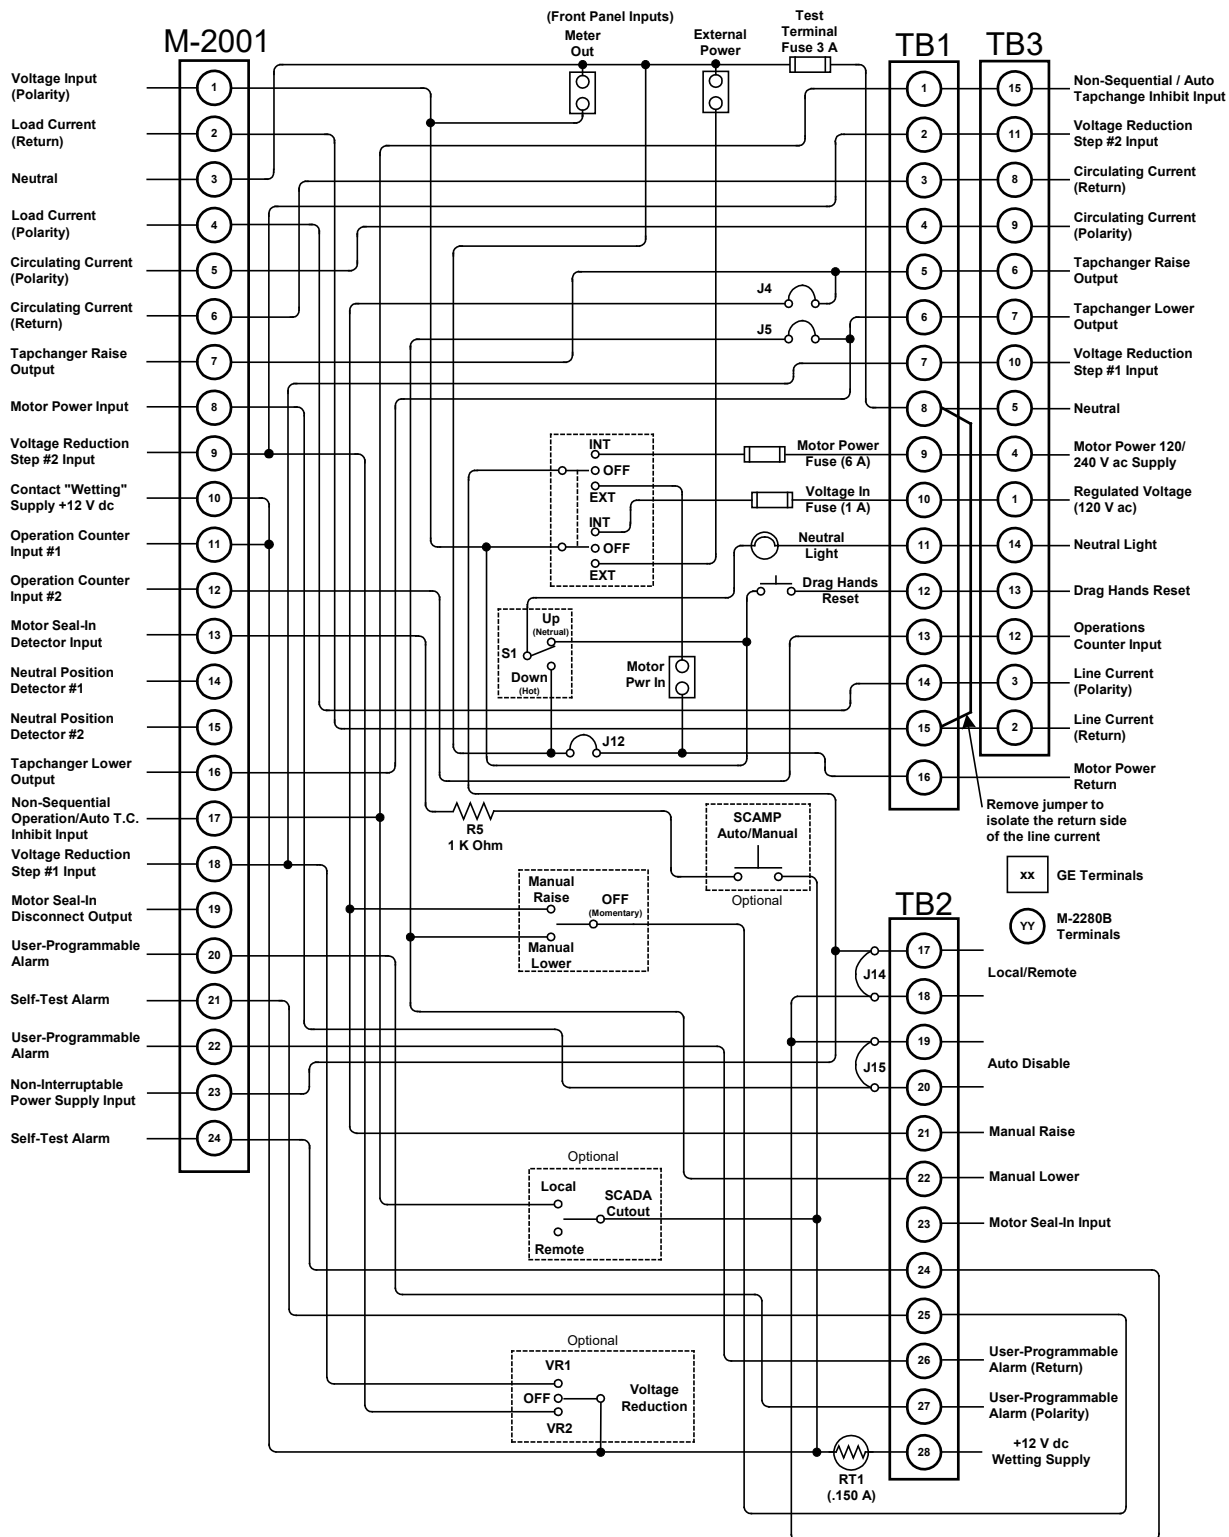

WARNING: In no case should the line current circuit be interrupted with the regulator or transformer energized. Do not remove auxiliary current transformers without shorting the current inputs. Death or severe electrical shock can occur.

Figure 3 M-2001C and M-2280B Adapter Panel with Optional SCAMP™ Auto/Manual Pushbutton Switch SCADA Cutout Switch and Voltage Reduction Switch

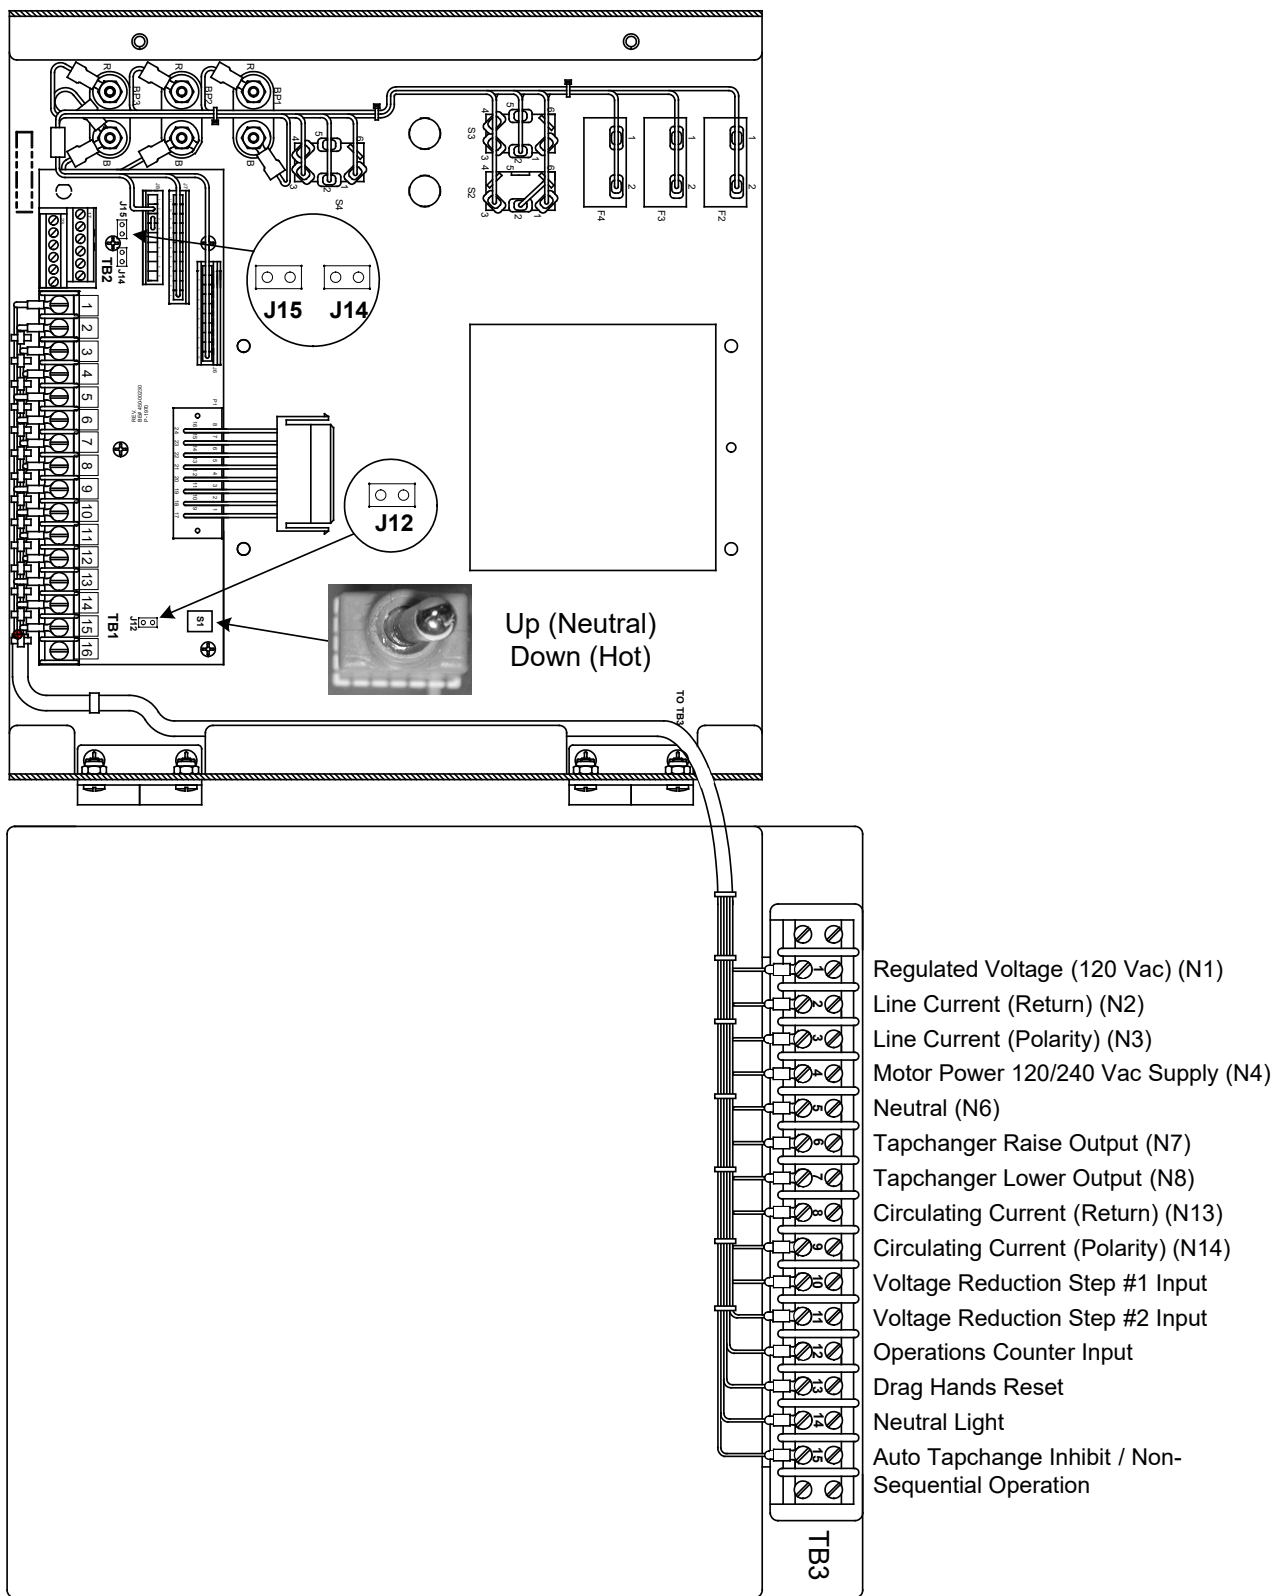


Figure 4 M-2280B Wiring Harness and External Connections


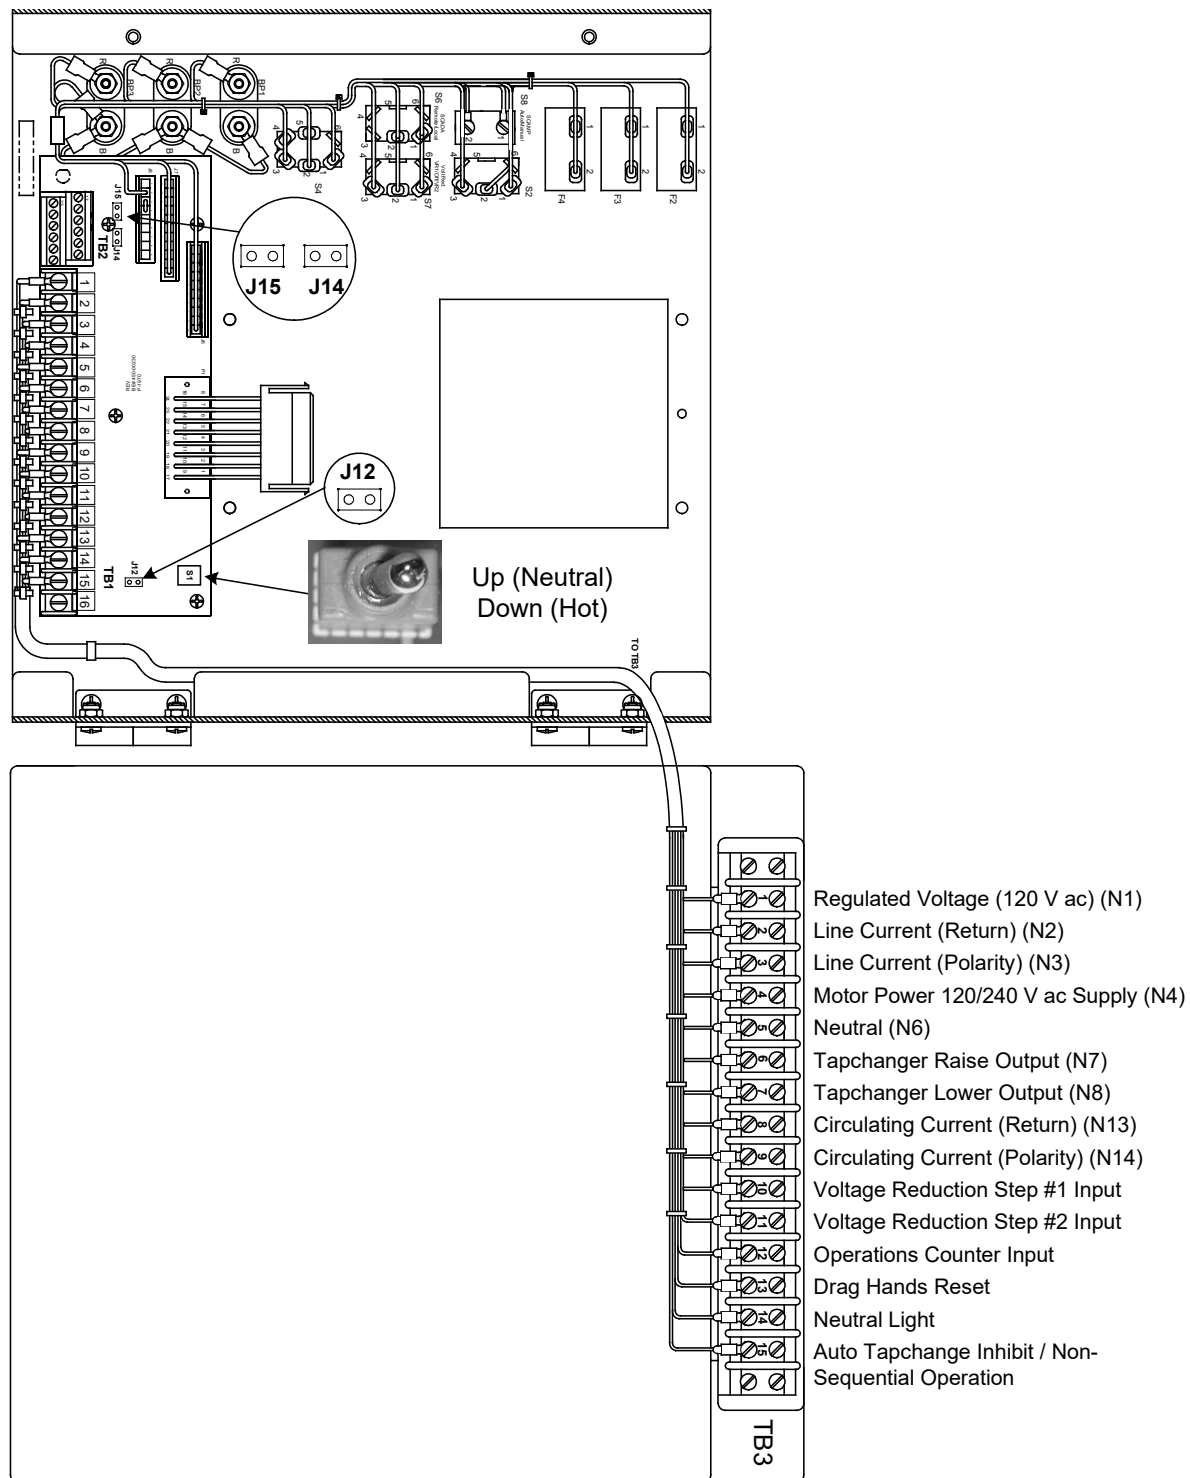


Figure 5 M-2280B Wiring Harness with optional SCAMP™ Auto/Manual Pushbutton switch, SCADA Cutout switch and Voltage Reduction switch

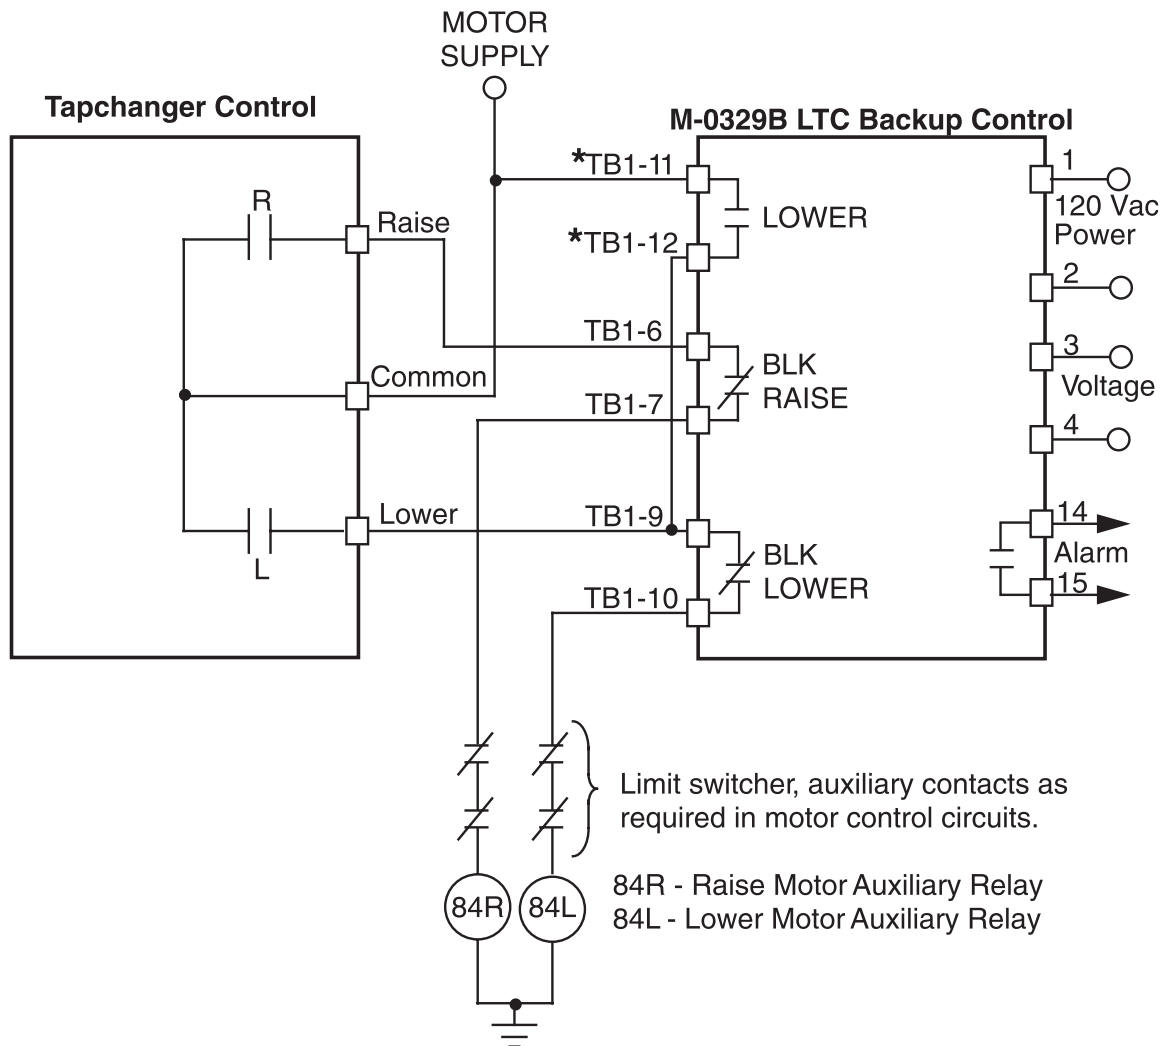

NOTE: *If first customer protection is not required, delete these connections.

Figure 6 Tapchanger Control and LTC Backup Control Interconnections

3.0 Installation

Refer to [Figure 9](#) for outline dimensions; refer to [Figure 10](#) for the hole drill dimensions of the M-2280B's side panel, if needed.

3.1 Removal of the Control

● **WARNING:** In no case should the line current circuit be interrupted with the regulator or transformer energized. Do not remove auxiliary current transformers without shorting the current inputs. Death or severe electrical shock can occur.

1. Verify that the control is in a safe condition that will allow it's removal from the control cabinet.
 - The control is de-energized and isolated from any potential safety hazards.
 - All local safety tagging rules have been applied as necessary.
2. Disconnect and identify the connections to the control.
3. Remove the old control from the cabinet.

3.2 Installing the M-2280B/M-2001

1. Mount the M-2001 to the M-2280B Adapter panel by using the hardware provided in the cloth bag. Use the lock washers supplied between the screws and the top of the front panel.

■ **NOTE:** The blue connector is keyed by a "V" notch in the middle to prevent incorrect mating ([Figure 7](#)). Check location of the key before plugging connector into the M-2001.

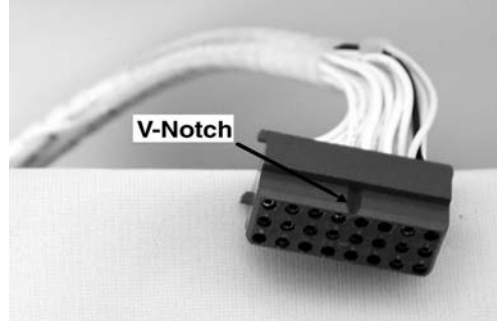


Figure 7 M-2001 Harness Connector

2. Plug the blue connector of the M-2280B harness into the bottom of the M-2001.

If desired, bench testing may be performed as described in [Section 5.0, Bench Test](#).

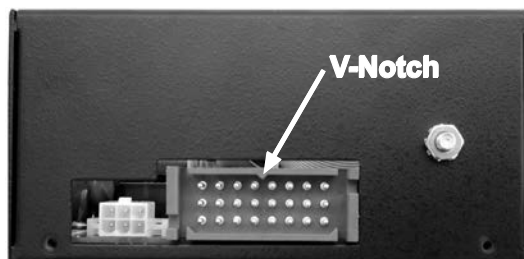


Figure 8 M-2001 V-Notch Orientation

3.3 Installation of the M-2280B Adapter Panel

1. Install the M-2280B using four studs in an 8" x 11" pattern that matches the original mounting pattern of the G.E. control. Refer to [Figure 9](#) for outline dimensions; refer to [Figure 10](#) for the hole drill dimensions of the M-2280B, if needed.
2. Mount the M-2280B Adapter Panel (with the M-2001 Tapchanger Control) onto the hinges in the control cabinet.

External connections are made to the terminal block at the top of the adapter panel (TB3). The terminal numbers do not match the General Electric terminal block, but are approximately in the same position. [Figure 1](#) through [Figure 5](#) show the M-2280B external connections with the corresponding GE terminal numbers.

3. Perform the necessary checkout procedures in **Sections 5.1, 5.2 and 5.3.**

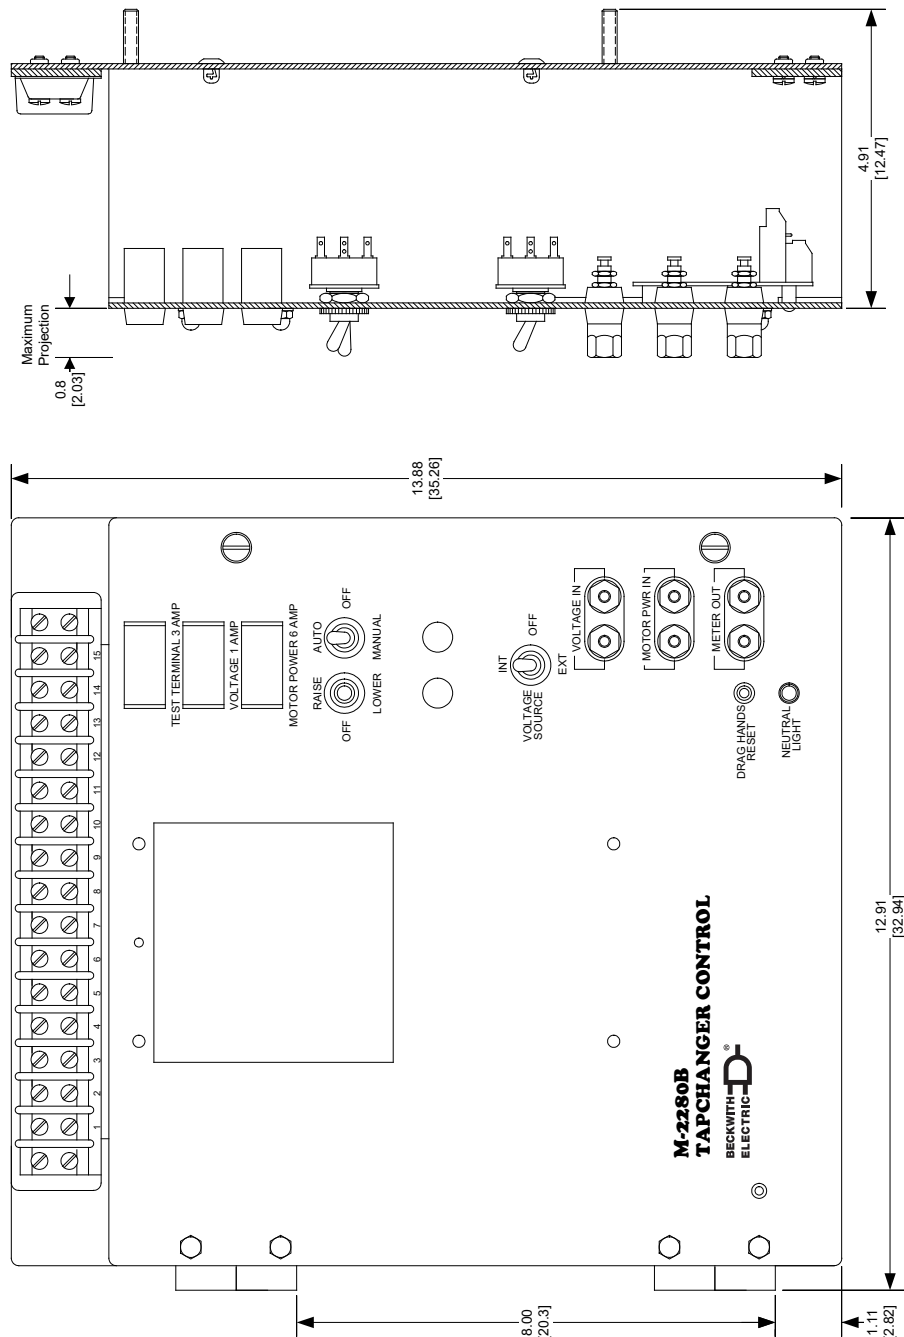


Figure 9 Outline Dimensions

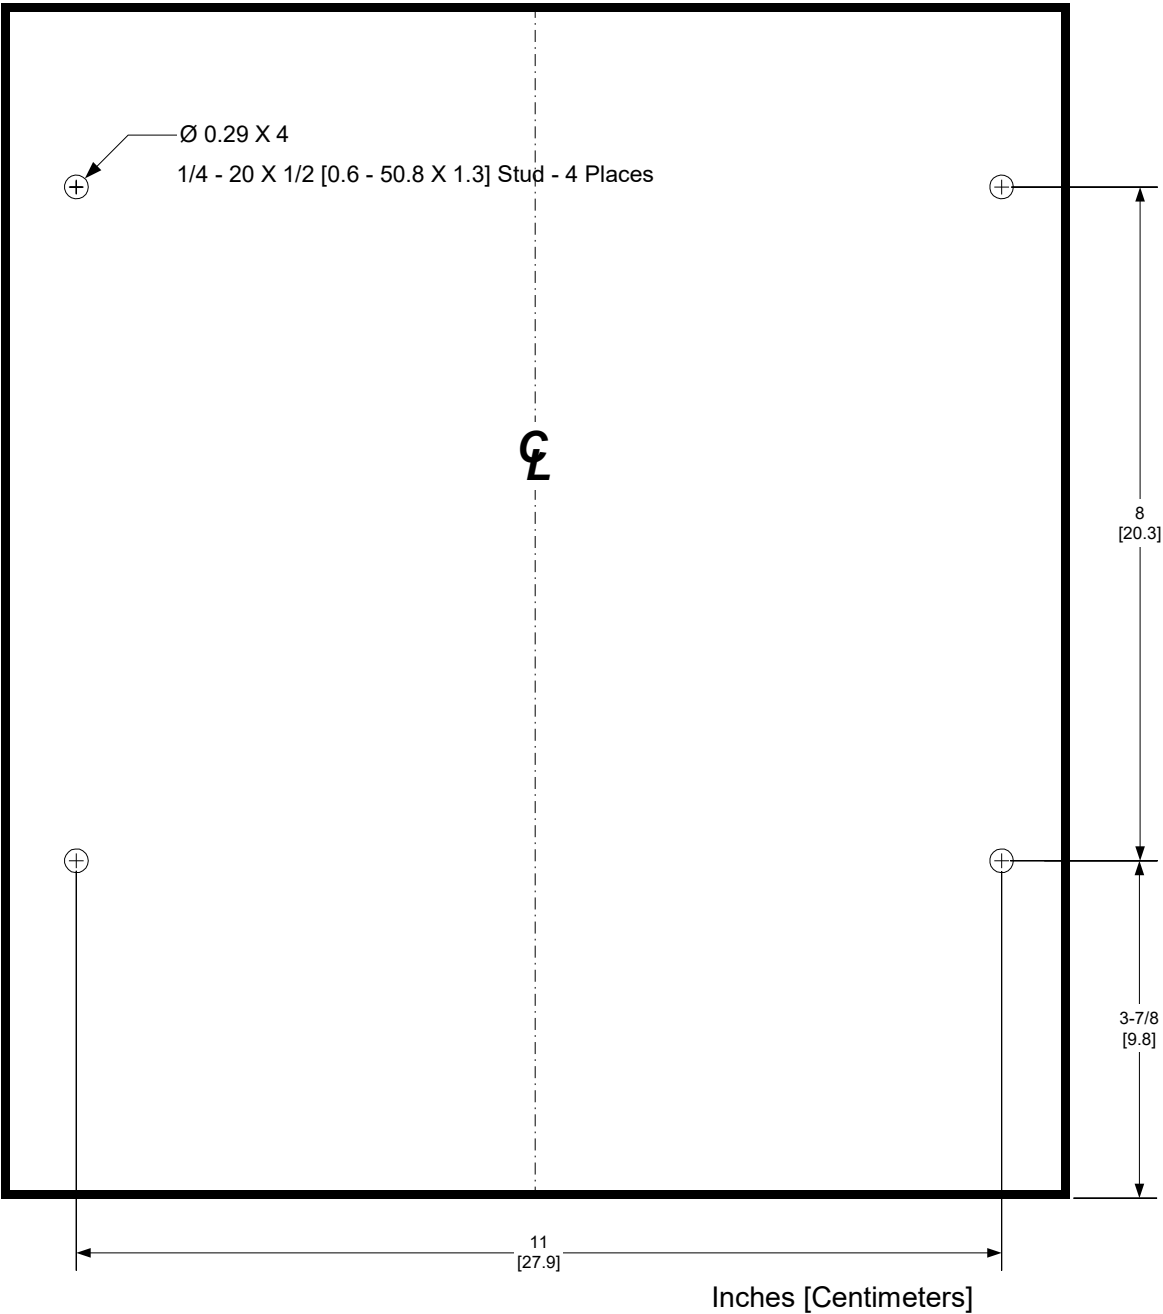


Figure 10 M-2280B Hole Drill Dimensions

4.0 M-2001 Tapchanger Control Software Settings

Adjust the BANDCENTER setting to the nominal voltage desired. Adjust the BANDWIDTH setting to the desired voltage band, centered on the Bandcenter setpoint, that the voltage must exceed before timer and subsequent tapchanger operation occurs. Adjust the TIME DELAY setpoint to a sufficient amount to eliminate excessive tapchanger operations. The LINE DROP COMPENSATOR should be set for the line impedance from the transformer to the load center. For further information, obtain Beckwith Electric Application Note #17, "Basic Considerations for the Application of LTC Transformers and Associated Controls."

4.1 M-0329B LTC Backup Control Settings

The BANDCENTER and BANDWIDTH dials on the M-0329B LTC Backup Control should be set so that the Block Lower limit is a small amount (approximately 2 V) below the lower band limit of the Tapchanger Control, and the Block Raise limit is a similar amount above the upper limit if line drop compensation is not used.

If line drop compensation is used, the M-0329B Block Raise limit should be set at the maximum voltage desired at the transformer secondary under full load.

The M-0329B LTC Backup Control also includes a deadband or runback function that regulates the maximum voltage from the transformer. This "Lower" function operates slightly above the Block Raise limit and is connected to force the tapchanger to lower the voltage if the upper limit is exceeded.

5.0 Bench Test (M-2001 Connected to M-2280B)

■ **NOTE:** This test assumes that the M-2001 Tapchanger Control is connected to the M-2280B Adapter Panel.

Test Equipment

- 0–200 mA current supply with phase angle settings of 0° to +90°
- 90–145 Vac voltage source at 60 Hz
- High impedance true RMS voltmeter with accuracy on ac of at least $\pm 0.2\%$ of reading
- Accurate Stop watch

Setup

1. Make the electrical connections as shown in [Figure 11](#).

■ **NOTE:** Refer to the M-2001C Instruction Book **Appendix A**, Figures A-1 through A-13 for the locations of screens within the software.

■ **NOTE:** There is a one second delay between the out-of-band condition and panel LED indication.

2. Enter initial M-2001 settings:

Initial Settings	
Bandcenter	120.0 V
Bandwidth	2.0 V
LDC Resistance	0.0 V
LDC Reactance	0.0 V
Paralleling	Circulating Current Method
Block Raise	135.0 V
Block Lower	105.0 V
Deadband	2.0 V
Timer	5.0 Seconds

Table 2 Initial Settings

Procedure

1. Apply 120.0 Vac from power source.
2. The display of the M-2001 will automatically advance to the **Local Voltage** screen.
3. Increase voltage to 121.2. The **LOWER** LED should illuminate.
4. Decrease voltage to 118.8. The **RAISE** LED should illuminate.
5. Set input voltage to 120.0 Vac. Wait for **RAISE** and **LOWER** LEDs to extinguish.
6. Increase voltage to 122.0 Vac, then start timing when voltage passes 121.0 V.
7. Stop timing when the lamp connected to the LOWER output illuminates (should be approximately 5 seconds).

Resistance

1. Apply 100.0 mA in-phase current to TB3-3 (load current-polarity) and TB3-2 (load current-return) of the adapter panel. (Set S_1 to LDC and S_2 to I_R .)
2. Set LDC Resistance to 24.0 V. The **RAISE** LED should illuminate.
3. Increase input voltage to 132.0 Vac. The **RAISE** and **LOWER** LEDs should be extinguished.
4. Set LDC Resistance to -24.0 V. The **LOWER** LED should illuminate.
5. Decrease input voltage to 108.0 Vac. Both **RAISE** and **LOWER** LEDs should extinguish.
6. Set LDC Resistance to 0.0 V.

Reactance

1. Apply 100.0 mA 90° leading current to TB3-3 (load current-polarity) and TB3-2 (load current-return) of the adapter panel.
2. Set S_1 to LDC and S_2 to I_L .
3. Set LDC Reactance to 24.0 V. The **LOWER** LED should illuminate.
4. Decrease input voltage to 108.0 Vac. The **RAISE** and **LOWER** LEDs should be extinguished.
5. Set LDC Reactance to -24.0 V. The **RAISE** LED should illuminate.
6. Increase input voltage to 132.0 Vac. Both **RAISE** and **LOWER** LEDs should be extinguished.
7. Set LDC Reactance to 0.0 V.

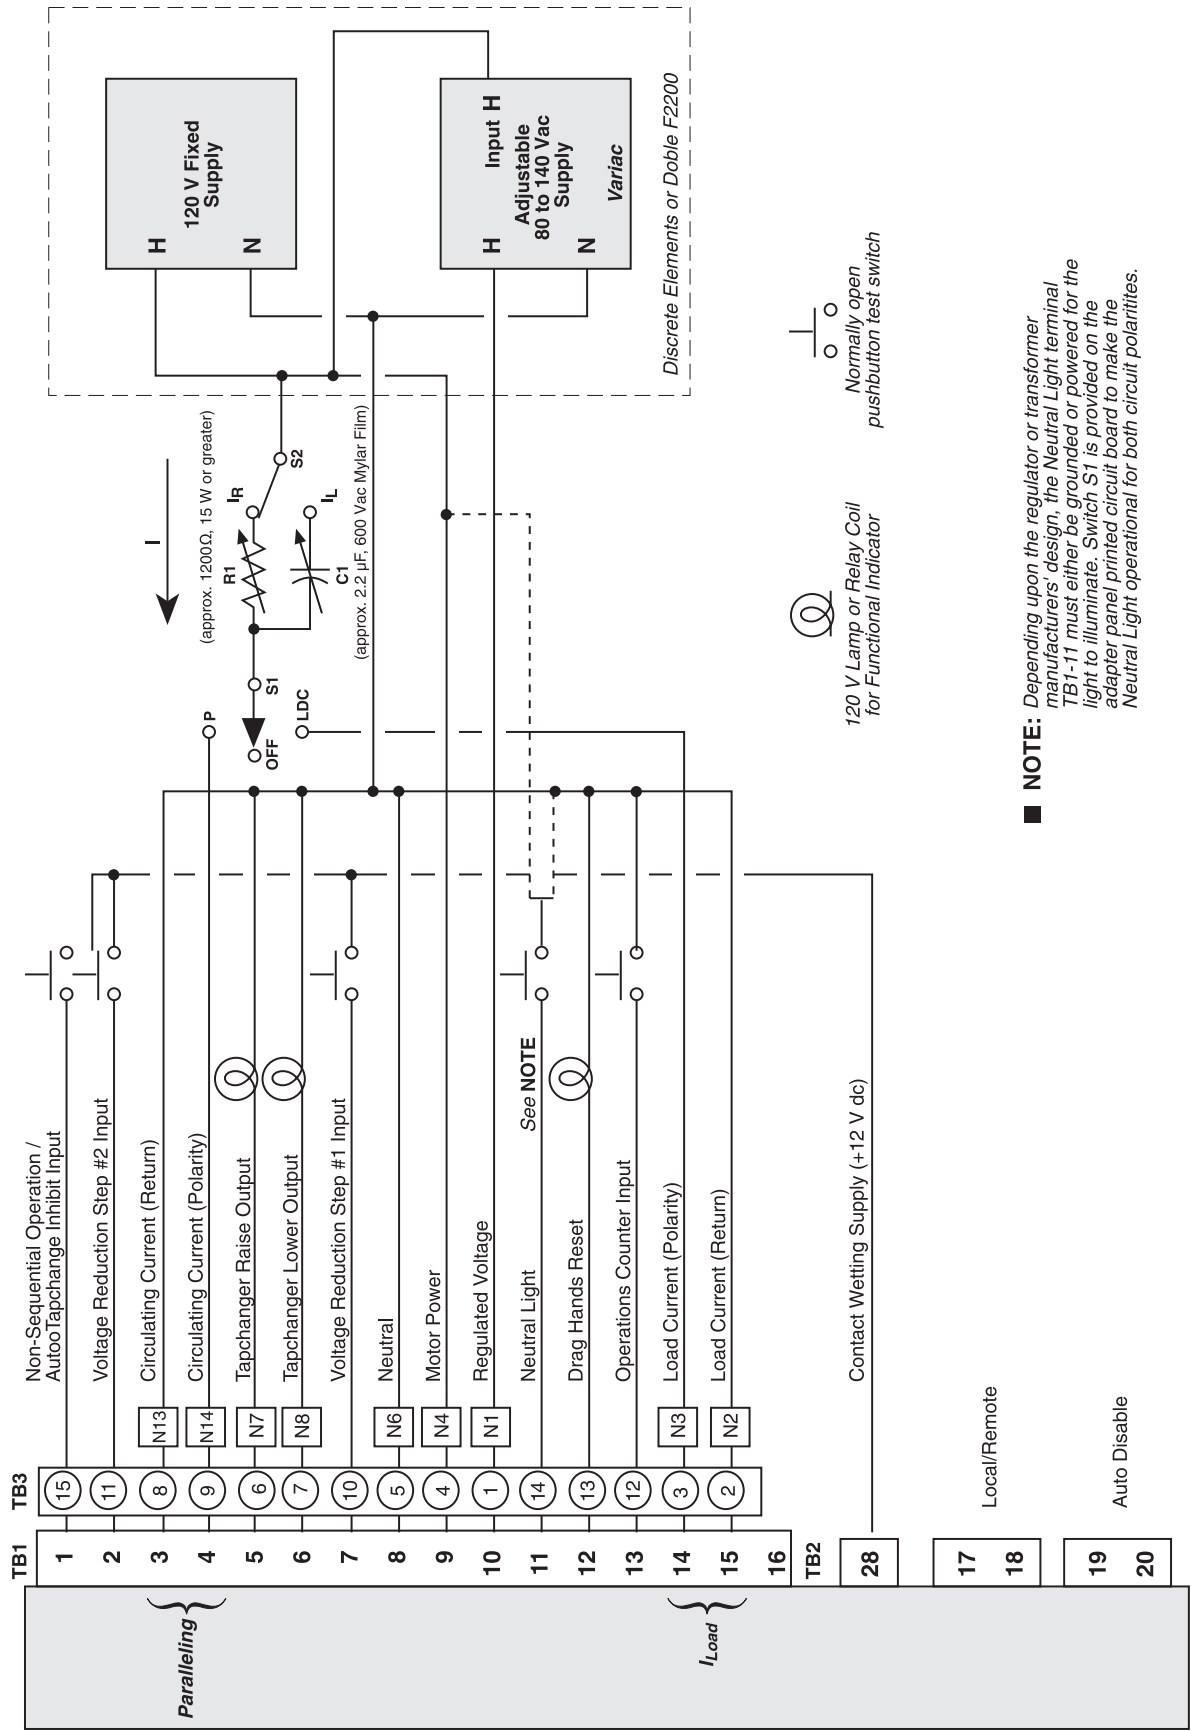


Figure 11 M-2280B Test Procedure External Connection

Paralleling

1. Apply 100.0 mA 90° leading current to TB3-9 (circulating current-polarity) and TB3-8 (circulating current-return) of the adapter panel.
2. The **LOWER** LED should illuminate.
3. Decrease voltage to 108.0 Vac. Both **RAISE** and **LOWER** LEDs should be extinguished.
4. Turn off current.

Voltage Source Switch

1. Set **AUTO/OFF/MANUAL** switch to **OFF**.
2. Set **VOLTAGE SOURCE** switch to **EXT**.
3. Verify that there is no manual **Raise** or **Lower** output.
4. Attach a voltmeter to **Meter Out** terminals.
5. Verify that no voltage is present.
6. Apply 120 Vac to both the **Voltage In** and **Motor Pwr In** binding posts (Black-Neutral, Red-Hot).
7. Set the **AUTO/OFF/MANUAL** switch to **AUTO**.
8. Verify normal raise and lower operation.
9. Return the **VOLTAGE SOURCE** switch to **INT**.

Drag Hands Reset

1. Verify that the **DRAG HAND RESET** switch works by connecting a lamp or ac relay from TB3-13 (drag hands reset) to TB3-5 (neutral) of the adapter panel. When the switch is pressed, the connected indicator should function.

Counter/Neutral Light/Tap Position

1. Set the M-2001 Tapchanger Control to display the **Operations Count** screen.
2. Verify the counter operation by connecting a switch between TB3-12 (operations counter input) and TB3-5 (neutral) of the adapter panel.
3. Lower the input voltage until the **RAISE** LED lights. Allow the delay timer to time out and then activate the switch between TB3-12 (operations counter input) and TB3-5 (neutral).
4. The tap position should change.
5. Jumper TB3-14 (neutral light) to TB3-5 (neutral).
6. Set the neutral light switch S1, located on the adapter panel printed-circuit board, to the toggle down position.
7. The neutral light on the adapter panel should light and the tap position should return to "0 Neutral."
8. Remove the jumper.

Block Raise/Block Lower/Dead Band

1. Set Block Raise to 126.0 V.
2. Set Block Lower to 114.0 V.
3. Set the M-2001 Tapchanger Control to display the **Bias Voltage** screen.
4. Press **Enter**.
5. Increase voltage to 126.5 V; **BR** should appear on the screen.
6. Increase voltage to 128.5 V; **BR** goes off and **FL** appears on the screen.
7. Decrease voltage to 113.5 V; **BL** appears on the screen.

—Bench Test Complete—

5.1 M-2001 Checkout Procedure

■ **NOTE:** This test of the M-2001 assumes that the unit remains connected to the M-2280B adapter panel.

Basic Operational Test

1. Apply 120.0 Vac to TB3-4 (motor power) and TB3-1 (regulated voltage) of the adapter panel.
2. Connect neutral to TB3-5 (neutral).
3. Verify local voltage \approx input voltage ± 0.3 V.
4. Apply 100.0 mA in-phase current to TB3-3 (load current-polarity) and TB3-2 (load current-return) of the adapter panel. Verify **Control Load** $I \approx 100$ mA and **Power Factor** $\approx 1.0 \pm 0.02$.
5. Apply 100.0 mA 90° leading current to TB3-9 (circulating current-polarity) and TB3-8 (circulating current-return) of the adapter panel.
6. Verify **Control Circ** $I \approx 100.0$ mA ± 2 mA.
7. Verify **Up**, **Down** and **Enter** buttons work.

—Checkout Procedure Complete—

5.2 In-Service Test

1. Set the M-2001 Tapchanger Control to display the **Bias Voltage** screen.
2. Press **Enter**.
3. Use **Up** and **Down** buttons to cause **RAISE** and **LOWER** outputs.

—In-Service Test Complete—

RETURN UNIT TO DESIRED SETTINGS

5.3 M-2280B Checkout Procedure

■ **NOTE:** All Beckwith Electric units are fully calibrated at the factory. There is no need to recalibrate the units before initial installation.

Set the AUTO/OFF/MANUAL SWITCH to OFF. Inspect the MOTOR POWER and VOLTAGE fuses to ensure they are correctly sized and have not blown.

Power

1. Remove any external connection between TB3-4 and TB3-1 which are located on the adapter panel printed circuit board. Also remove any voltage applied to TB3-4 externally. Using a voltmeter, make sure that the voltage applied to TB3-1 is nominal 120 Vac with respect to TB3-5 (neutral). Apply power to TB3-1 (hot) and TB3-5 (neutral).
2. Connect a voltmeter to the **METER OUT** test terminal on the front of the adapter panel. 120 Vac should be indicated.

● **WARNING:** Voltage applied at the **METER OUT** test terminal may energize the regulator or transformer to a high voltage through the voltage transformer. Death or severe electrical shock can occur. Do not connect any voltage source at the **METER OUT** test terminal.

▲ **CAUTION:** Do not reverse the ground and hot wires when connecting an external source. A 3 AG fuse (F2) is installed to protect the relay from damage if these connections are accidentally reversed. Spare fuses are supplied inside the fuse holders.

Units returned with only a blown fuse are not covered by warranty, and a nominal repair charge will be made for replacement of the fuse. Please check the fuse before returning the unit for repair, in order to avoid unnecessary repair charges.

3. Apply motor power to TB3-4 (hot) and TB3-5 (neutral). Set the **AUTO/OFF/MANUAL** switch to **MANUAL** and using the **RAISE/OFF/LOWER** switch, verify that the motor runs in the proper direction when this switch is in the **RAISE** and **LOWER** positions.
4. Set the **AUTO/OFF/MANUAL SWITCH** to the **AUTO** position. Refer to the Field Checkout Procedure as found in the M-2001 Status & Setpoint Review Guide of the M-2001 Tapchanger Control Instruction Book for test/operation procedures.
5. As shown in [Figure 12](#) temporarily place a shorting device across the LDC-CT secondary to short the line drop compensator circuit, and place another shorting device across TB3-8 and TB3-9 to short the circulating current paralleling input, for the load current check. Insert an ammeter between the polarity input and TB3-3. Open the load current shorting device and with a known load on the transformer or regulator, measure the current in the load current circuit to ensure that this current is correct for 0.2 A full load.
6. Replace the shorting device across the load current input and remove the ammeter. Reconnect polarity to the unit and remove both jumpers. The **LINE DROP COMPENSATOR** will be activated. Correct CT polarity can be checked by simply incorporating sufficient +R compensation. The regulator should time out and run so as to raise the output voltage.

● **WARNING:** In no case should the load current circuit be interrupted with the regulator or transformer energized. Do not remove auxiliary current transformers without shorting the current inputs. Death or severe electrical shock can occur.

Voltage Source Switch

The VOLTAGE SOURCE switch will disconnect all power from the unit when in the EXT position with no source connected to the front panel voltage and motor power inputs.

▲ CAUTION: Do not reverse the ground and hot wires when connecting an external source. A 3 AG (F2) is installed to protect the relay from damage if these connections are accidentally reversed.

With the VOLTAGE SOURCE switch in the EXT position, the sensing and motor power circuits are connected to the VOLTAGE IN and MOTOR PWR IN binding posts on the front panel. The unit can be tested using an external 120 V rms source of proper polarity applied to these terminals. Testing can be accomplished by adjusting the amplitude of the external source.

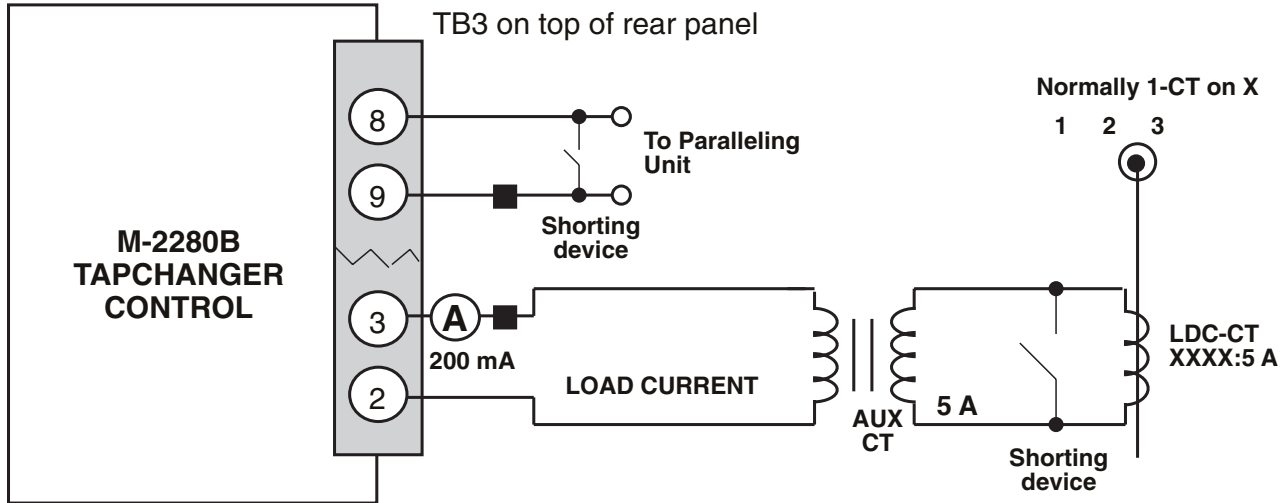


Figure 12 Setup for Current Checkout Procedure

Legal Information

Patent

The units described in this manual are covered by U.S. Patents, with other patents pending.

Buyer shall hold harmless and indemnify the Seller, its directors, officers, agents, and employees from any and all costs and expense, damage or loss, resulting from any alleged infringement of United States Letters Patent or rights accruing therefrom or trademarks, whether federal, state, or common law, arising from the Seller's compliance with Buyer's designs, specifications, or instructions.

Warranty

Seller hereby warrants that the goods which are the subject matter of this contract will be manufactured in a good workmanlike manner and all materials used herein will be new and reasonably suitable for the equipment. Seller warrants that if, during a period of five years from date of shipment of the equipment, the equipment rendered shall be found by the Buyer to be faulty or shall fail to perform in accordance with Seller's specifications of the product, Seller shall at his expense correct the same, provided, however, that Buyers shall ship the equipment prepaid to Seller's facility. The Seller's responsibility hereunder shall be limited to replacement value of the equipment furnished under this contract.

Seller makes no warranties expressed or implied other than those set out above. Seller specifically excludes the implied warranties of merchantability and fitness for a particular purpose. There are no warranties which extend beyond the description contained herein. In no event shall Seller be liable for consequential, exemplary, or punitive damages of whatever nature.

Any equipment returned for repair must be sent with transportation charges prepaid. The equipment must remain the property of the Buyer. The aforementioned warranties are void if the value of the unit is invoiced to the Seller at the time of return.

Indemnification

The Seller shall not be liable for any property damages whatsoever or for any loss or damage arising out of, connected with, or resulting from this contract, or from the performance or breach thereof, or from all services covered by or furnished under this contract.

In no event shall the Seller be liable for special, incidental, exemplary, or consequential damages, including but not limited to, loss of profits or revenue, loss of use of the equipment or any associated equipment, cost of capital, cost of purchased power, cost of substitute equipment, facilities or services, downtime costs, or claims or damages of customers or employees of the Buyer for such damages, regardless of whether said claim or damages is based on contract, warranty, tort including negligence, or otherwise.

Under no circumstances shall the Seller be liable for any personal injury whatsoever.

It is agreed that when the equipment furnished hereunder are to be used or performed in connection with any nuclear installation, facility, or activity, Seller shall have no liability for any nuclear damage, personal injury, property damage, or nuclear contamination to any property located at or near the site of the nuclear facility. Buyer agrees to indemnify and hold harmless the Seller against any and all liability associated therewith whatsoever whether based on contract, tort, or otherwise. Nuclear installation or facility means any nuclear reactor and includes the site on which any of the foregoing is located, all operations conducted on such site, and all premises used for such operations.

Notice:

Any illustrations and descriptions by Beckwith Electric are for the sole purpose of identification.

The drawings and/or specifications enclosed herein are the proprietary property of Beckwith Electric, and are issued in strict confidence; therefore, shall not be used as a basis of reproduction of the apparatus described therein without written permission of Beckwith Electric.

No illustration or description contained herein shall be construed as an express warranty of affirmation, promise, description, or sample, and any and all such express warranties are specifically excluded nor shall such illustration or description imply a warranty that the product is merchantable or fit for a particular purpose. There shall be no warranties which extend beyond those contained in the Beckwith Electric terms of sale.

This Page Left Intentionally Blank

BECKWITH ELECTRIC

6190 118th Avenue North • Largo, Florida 33773-3724 U.S.A.

PHONE (727) 544-2326

beckwithelectricssupport@hubbell.com

www.beckwithelectric.com

ISO 9001:2015