



MODEL NUMBERS

PHM1PC-xxxx PHS1PC-xxxx

PRECAUTIONS

- · Read and understand all instructions before beginning installation
- NOTICE: Follow National and/or local Electrical Codes for installation of line voltage and low voltage components.
- Notice: Do not install if product appears to be damaged
- · PowerHUBB nodes are only capable of being programmed to values in increments of 10, from 100mA to 1400mA.
- 5 Maximum total nodes on a daisy-chain from the Power Supply Equipment port.
- These products are classified as to FIRE and SHOCK hazards only.
- · WARNING: Risk of fire or electric shock. Install nodes only in luminaires that have the construction features and dimensions capable of maintaining the PowerHUBB node and where the input rating of the node does not exceed the input rating of the luminaire.
- Do not leave open holes in an enclosure of wiring or electrical components.
- Do not make or alter any open holes in an enclosure of wiring or electrical components during installation.
- WARNING: Risk of fire or electric shock. Luminaire wiring and electrical parts may be damaged when drilling for installation of PoE LED driver. Check for enclosed wiring and components.
- WARNING: Risk of fire or electric shock. Removal of existing line voltage driver requires knowledge of luminaires electrical systems. If not qualified, do not attempt removal. Contact a qualified electrician.
- WARNING: To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.
- WARNING: LED lamps are sensitive to Electrical Static Discharge (ESD). Care should be taken to avoid direct contact with the LEDs. Installers should be grounded using a wrist strap or other suitable method of grounding. Failure to ground the installer may cause pre-mature failures and void the fixture warranty.
- WARNING: To avoid potential fire or shock hazard, do not retrofit nodes in luminaires employing shunted bi-pin lamp holders. Note: Shunted lamp holders are found only in fluorescent luminaires with Instant-Start ballasts. Instant-start ballasts can be identified by the words "Instant Start" or "I.S." marked on the ballast. This designation may be in the form of a statement pertaining to the ballast itself, or may be combined with the marking for the lamps with which the ballast is intended to be used, for example F40T12/IS. For more information, contact the LED luminaire manufacturer.

MATERIAL NEEDED:

• (2) #8 self-tapping screws

TOOLS REQUIRED:

Wire cutter/stripper	Small Phillips screw driver	1/4" hex socket driver
Cordless drill with 9/64" drill bit	Personal safety equipment	

SAVE THESE INSTRUCTIONS!

DESCRIPTION

Hubbell Control Solutions' (HCS), PowerHUBB nodes are intended to replace typical LED Drivers and serve as the power supply and the control device providing a centralized networked solution. Directly connecting to the Luminaire LED board the PowerHUBB node controls directly the on/off/dimmed functionalities. Low voltage inputs, located on the nodes, allow accessory devices such as sensors, switch stations or daylight sensors direct control over spaces.





SPECIFICATIONS

	PoE Interface: Master Node only	IEEE 802.3at-2009 PD Type 2, Class 4, Compliant Input with LLDP extensions for negotiating power above 30W using 4 pairs				
	Input:	48-57VDC				
Electrical	Peak operating power:	60W				
	Nominal standby power:	2.0W				
	PoE input connection:	Unshielded female RJ45 jack for use with Cat5e/6 cable to PSE device				
	BUS connections:	Unshielded female RJ45 jack for use with Cat5e/6 cable to PowerHUBB Master or Satellite node				
	Device type:	Class 2 electrical device				
	Output channel:	Single LED driver channel				
	Driver design:	Constant current LED driver design, programmable in 10mA increments from 100mA to 1750mA (Refer to Fig. 1)				
	Dimming:	Full range 1% to 100% dimming control in 1% increments via CCR, PWM or Hybrid mode				
LED Driver Outputs	Output voltage range:	12VDC - 48VDC				
	Rated output power:	53W max				
	Protection:	Short circuit and open circuit protection				
	Connections:	Screw terminals; accept 14-26 AWG conductors. Tightening torque: 2.0-3.5 in-lbs. (0.35-0.4 Nm)				
	Power supply:	One +24VDC terminal for powering external sensors, 500mA total capacity				
6 1/0	Occupancy sensor input:	OCC-1 for dry-contact sensor signals and OCC-2 for 24VDC Active-Hi sensor signals				
Sensor I/O Connections	Analog sensor Inputs:	Two 0-10VDC analog sensor inputs				
	Connections:	Screw terminals accept 16-26 AWG conductors. Tightening torque: 2.0-2.2 in-lbs. (0.23-0.25 Nm)				
	Switch inputs:	Five momentary dry contact pushbutton inputs				
Wall Switch	Pilot light outputs:	Five pilot light outputs, rated for 24VDC@7.5mA each				
Connections	Connections:	Screw terminals accept 16-26 AWG conductors. Tightening torque: 2.0-2.2 in-lbs. (0.23-0.25 Nm)				
	For indoor use only					
	IP Rating	IP20				
	Sound Rating	<24dB Class A				
Environment	Maximum case temperature:	185°F (85°C)				
Environment	Operating temperature:	32°F to 158°F (0°C to 70°C)				
	Operating humidity:	10% to 80% RH non-condensing				
	Storage temperature:	-4°F to 185°F (-20°C to 85°C)				
	Storage humidity:	5% to 95% RH non-condensing				
Mounting	Mounts inside Fixture can be mounted remotely. (see remote mounting chart)					
Dimensions-Overall	4.54" (115mm) L x 2.87" (73mm) W x 1.10" (28mm) H					
Dimensions-Mounting Tabs Removed	3.54" (90mm) L x 2.87" (73mm) W x 1.10" (28mm) H					
Color	Black					
		UL 2108, CAN/CSA C22.2 No. 9				
	Safety standards:	UL 1598C, CAN/CSA C22.2 No. 250.0-08, CSA B-79A				
Safety & EMC		UL 2043, Suitable for Use in Air Handling Spaces (Plenum rated)				
	EMC Emissions:	Compliance to EN 55015:2013				
	EMC Immunity:	Compliance to EN 61547:2009				






Safety & EMC	FCC:	Compliance to Title 47 Part 15 Subpart B Section 15.109	
	EU:	RoHS Compliant	
Rated Lifetime	50,000+ hours		
Origin	Made in the USA		
Warranty	Five year limited		

INSTALLATION

- 1. Disconnect power to existing LED fixture during installation and before servicing.
- 2. Only install in LED fixtures with a compatible forward voltage range of 24-48VDC (Class 2) and maximum current values of 1400mA or less. Consult with Hubbell Control Solutions or LED fixture manufacturer to verify LED voltage and current requirements.
- 3. Open the LED fixture and remove existing line voltage driver. The only remaining wiring should be the LED lead wires.
- 4. Dispose of line voltage driver in accordance with environmental requirements.
- 5. Use existing mounting holes, if available, or mark and drill mounting holes for HCS PowerHUBB node.
- 6. Connect LED lead wires to W+/W- terminals on node. Be sure to observe correct polarity.

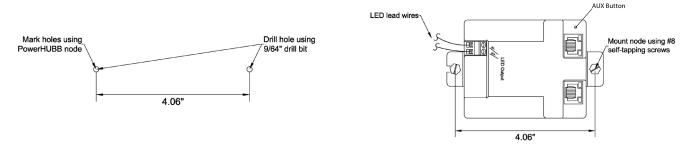

- 7. Connect Ethernet patch cable from PSE to the yellow PoE port. Once node is detected and power is granted by PSE the green light on the port will turn on solid and the amber light will begin to blink. By default the PowerHUBB enabled fixture will turn on at a low level until commissioned.
- 8. Re-assemble LED fixture.

AUX BUTTON

- 1. If held when the node boots, forces the node into programming mode.
- 2. If held for 10 seconds, erases the EEPROM.
- *DO NOT PRESS*

REMOTE MOUNTING

Applications that call for remote mounting of the PowerHUBB nodes separate from the LED luminaire are acceptable. Please follow the maximum wiring distances listed in the table below when selecting an appropriate wire gauge.

Remote Mounting		AWG WIRE SIZES					
Kemote i	viounting	12	14	16	18	20	22
	350	900	566	356	224	141	89
뉟	500	630	396	249	157	99	62
JT CURRENT (mA)	700	450	283	178	112	70	44
	100	315	198	125	78	49	31
OUTPUT (n	1100	286	180	113	71	45	28
no	1400	225	141	89	56	35	22
	1750	180	113	71	45	28	18

Max allowed distance between node and LED module in feet (Based on 1V drop)









CONNECTION DIAGRAMS

SENSOR TERMINAL BLOCK			
LABEL	FUNCTION & RATING		
+24VDC	+24VDC power surce for sensors, 500mA total capacity per node		
OCC-1	Dry-contact motion sensor input		
OCC-2	Motion sensor control return input		
GND	Ground Terminal (Sensor Common)		
Al-1	Analog Input, 0-10VDC (Photo Sensor)		
Al-2	Analog Input, 0-10VDC		

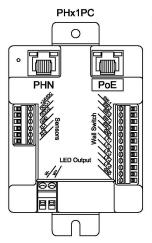


WALL SWITCH TERMINAL BLOCK			
LABEL	FUNCTION & RATING		
SW-1	Dry contact switch input 1		
SW-2	Dry contact switch input 2		
SW-3	Dry contact switch input 3		
SW-4	Dry contact switch input 4		
SW-5	Dry contact switch input 5		
GND	Switch ground terminal		
LT-1	Pilot light 1, 24VDC @ 7.5mA		
LT-2	Pilot light 2, 24VDC @ 7.5mA		
LT-3	Pilot light 3, 24VDC @ 7.5mA		
LT-4	Pilot light 4, 24VDC @ 7.5mA		
LT-5	Pilot light 5, 24VDC @ 7.5mA		
GND	Switch pilot light ground terminal		

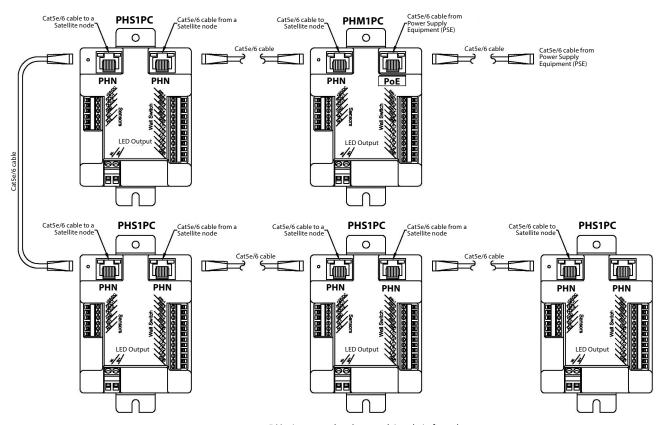

5 Maximum total nodes on a daisy-chain from the Power Supply Equipment port.





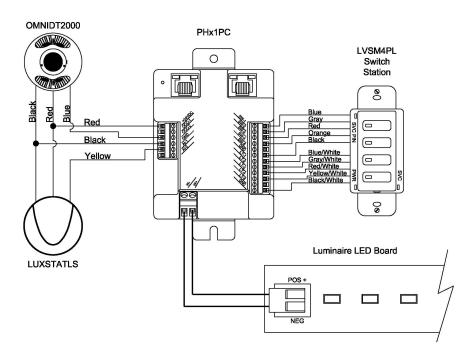

POWERHUBB ARCHITECTURE

