






SECTIONS

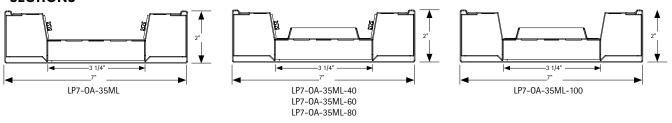


BOTTOM VIEW




Solid Housing

SINGLE MOUNTING

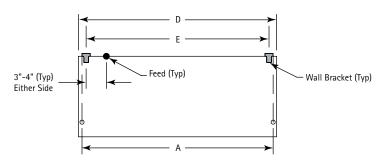

ROW MOUNTING

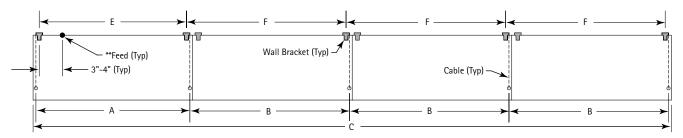

^{**}Feed location is typical for any fixture within row. Reference job drawing for job-specific locations.


DATA CHART

Nominal Length	Blank Distribution (80% Up, 20% Down)	Optional Distributions: (60% Up, 40% Down) (40% Up, 60% Down) (20% Up, 80% Down) (0% Up, 100% Down)	A	В	С	D	E	F
4'	14 lbs.	16.3 lbs.	47 1/4"	48"	192 5/8"	48 5/8"	45 1/4"	48"
8'	22.5 lbs.	26 lbs.	95 1/4"	96"	384 5/8"	96 5/8"	93 1/4"	96"


Page **1/5** Rev. 03/21/18 BEAMS / **LP7 WM TID**





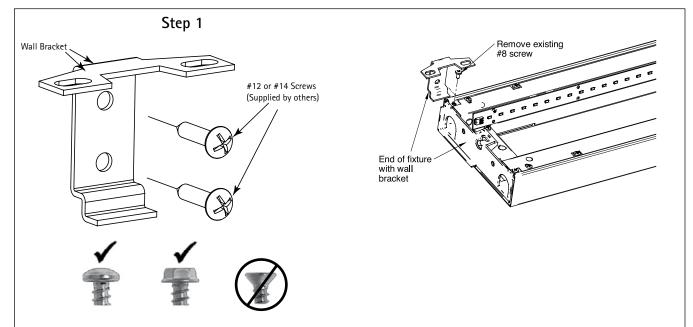

Install wall brackets at the desired elevation and at intervals per Data Chart. Only use screws with flat contact faces. Taper-head screws will cause brackets to shift during installation. Bracket elevation should be accurately controlled to ensure level rows.

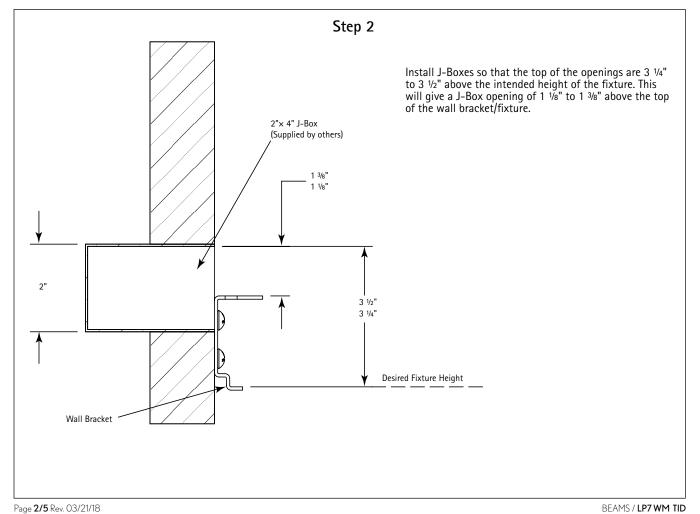














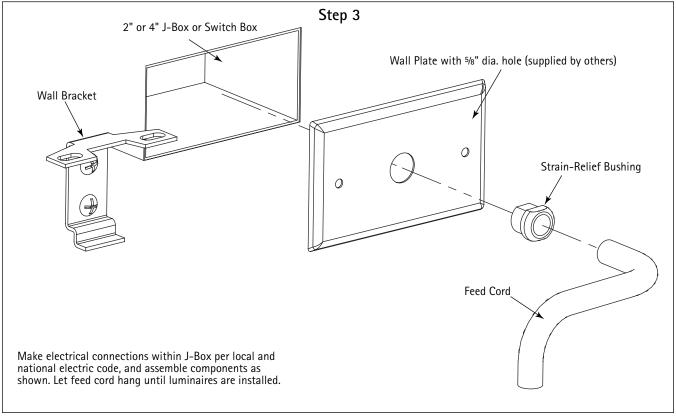

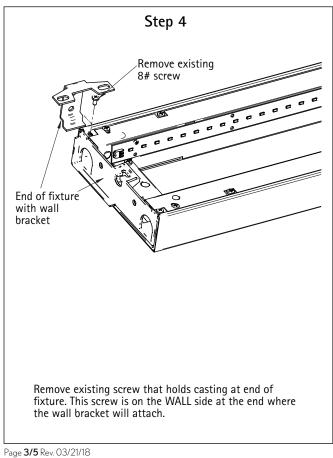

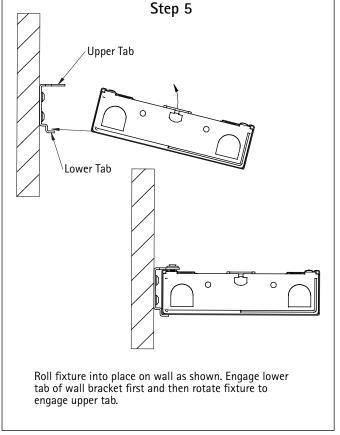


Page **3/5** Rev. 03/21/18











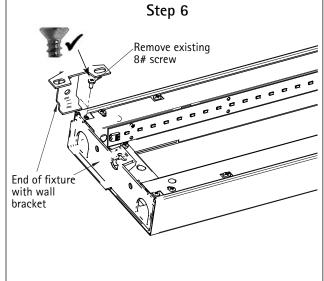

Install washer and flat-head screw supplied with kit. Only one (1) screw can be used per bracket. Verify that the attachment screw goes into the casting. This screw should be left loose until after leveling fixture.

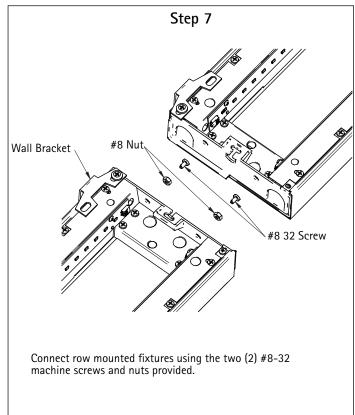

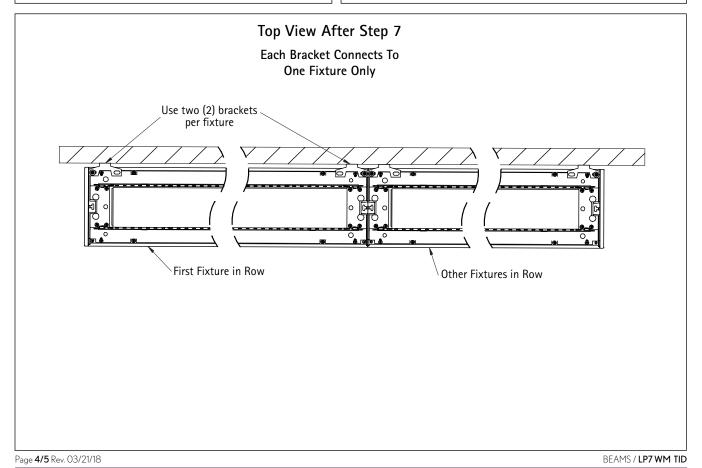

© 2018 Alera Lighting, a division of Hubbell Lighting, Inc. Because of continuing product improvement programs, Alera Lighting reserves the right to change specifications without notice. 701 Millennium Blvd. Greenville, SC 29607 / Tel 864.678.1000 / Tech Support 864.678.1580 / Website www.aleralighting.com


HUBBELL










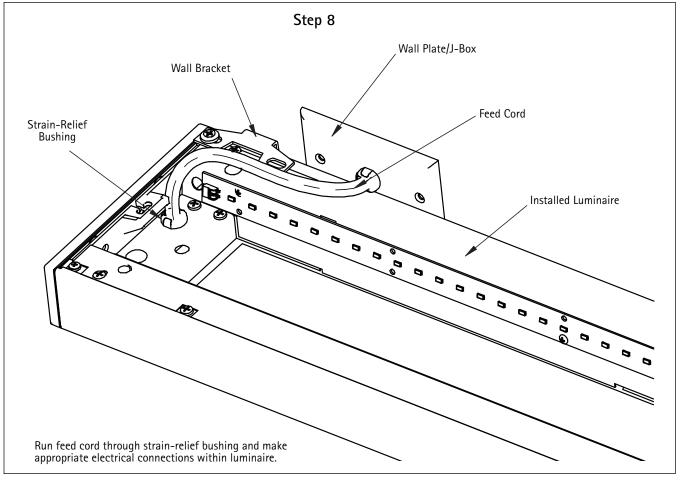

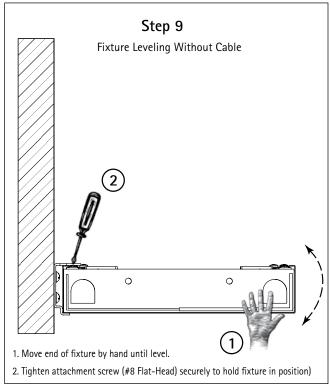

Page **5/5** Rev. 03/21/18 BEAMS / **LP7 WM TID**

