

# SP2 Fiber Handset/Speaker Amplifier Station **Quick Installation Guide**

### Important Safety Instructions

- Read, follow, and retain instructions—All safety and operating instructions should be read and followed before operating the unit. Retain instructions for future reference.
- Heed warnings—Adhere to all warnings on the unit and in the operating instructions.
- Attachments—Attachments not recommended by the product manufacturer should not be used, as they may cause hazards.
- Servicing-Do not attempt to service this unit by yourself. Opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

ATTENTION /!\ -Install equipment without modification and according to all applicable local, national and international electrical codes. North America-Consult the National Electrical Code (NFPA 70), Canadian Standards Association (CSA 22.1), and local codes for specific requirements regarding your installation. Class 2 circuit wiring must be performed in accordance with NEC 725.55.

These enclosures must be installed by trained, qualified and competent personnel. Installation must comply with state and national regulations, as well as safety practices for this type of equipment.

### charger without the batteries connected.

In 24 V dc systems, most chargers have an unloaded output of 35 to 45 volts that can quickly damage the equipment designed for nominal 24 volts. The maximum battery voltage should never exceed the maximum specified input voltage.

# 

### energized.—Ensure proper grounding to protective earthing.

ATTENTION / \_\_\_\_\_ This device requires an active laser component provided by the end installer. Supply voltage 3.3 V dc, supply current 300 mA, power dissipation 1 W. Fiber optic module must comply with the provisions of Laser Class 1.

### **General Information**

This guide covers the installation of the SP2 Fiber Handset/Speaker Amplifier Station. Refer to Publication 42004-797L2 for detailed explanations of the available configuration options and adjustments, system design information, and warranty information. GAI-Tronics' product documentation is located on the "Document Center" page of the GAI-Tronics website. The link to the document center is https://www.gaitronics.com/docs/default.htm. Figure 2 shows the standard SP2 Fiber Handset/Speaker Amplifier Station.

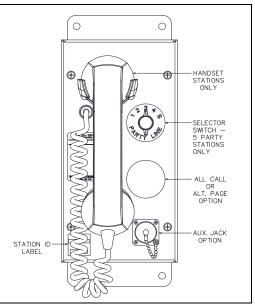


Figure 1. SP2 Station

GAI-Tronics Corporation 400 E. Wyomissing Ave. Mohnton, PA 19540 USA 610-777-1374 S00-492-1212 Fax: 610-796-5954 VISIT WWW.GAI-TRONICS.COM FOR PRODUCT LITERATURE AND MANUALS

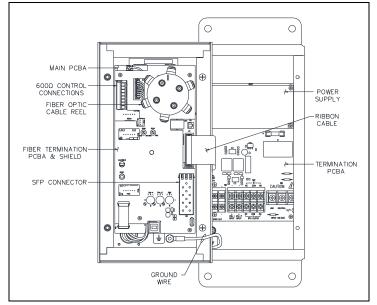


Figure 2. SP2 Station—Interior View

### **Available Settings and Adjustments**

Most optional equipment is preconfigured to default settings at the factory. The following is a partial list of the available adjustments and settings that may be needed:

- speaker volume
- series/parallel speaker connection
- receiver volume
- station ID and zone selector.

### Installation

### Mounting the Enclosure

Mount the enclosure using the four 0.312-inch (8 mm) diameter holes located on the mounting flanges with  $\frac{1}{4}$ -inch (M6) hardware. The suggested mounting height for all station enclosures is 48 inches (1219 mm) to the center of the bottom mounting holes of the enclosure. See <u>Figure 3</u> for mounting details. The SP2 Station is not supplied with conduit or cable openings.

Remove the front panel and drill or punch entry openings in the rear section of the enclosure. The station is suitable for bottom and/or top entry. The recommended entry is via the enclosure bottom to prevent moisture from dripping onto the termination board. Refer to Figure 3 for the suggested locations of cable entry. There must be a minimum of  $\frac{1}{2}$  inch (13 mm) of material between entry holes.

### **Field Wiring**

The SP2 Station provides terminal blocks on the termination PCBA located in the rear enclosure for field wiring the power, speaker, and RTU connections. Connect spade lugs to the wires before fastening them to the termination board terminal blocks to obtain the most secure connection. Torque the terminal block screws to 8–10 lb·in (0.90–1.13 Nm) when attaching the spade lugs.

#### **Available Options**

- 70/100V constant voltage termination board with 24 watt output
- 24 V dc power supply
- speaker/amplifier only (no handset)
- headset with page pressbar
- five configurable alternate page destinations with selector switch
- All-Call push button
- PVC or Hytrel<sup>®</sup> handset cords in 6-, 15-, or 25-foot lengths
- conformal PCBA coating

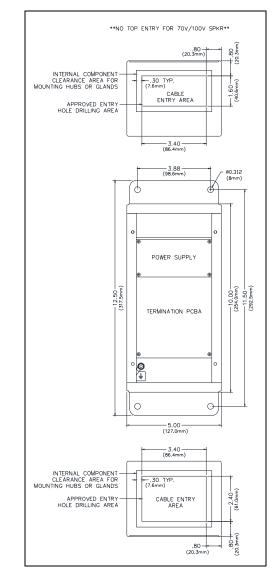


Figure 3. Suggested Wire Entry Locations

The main PCBA, mounted on the back of the front panel, contains the 600-ohm audio connection. Use ferrule terminals for this connection. The fiber termination board is mounted on top of the main PCBA, which provides fiber optic termination to the Ethernet SFP transceiver.

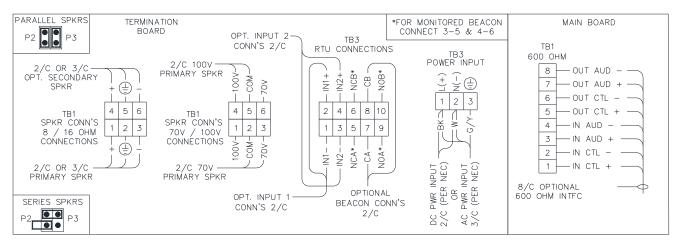


Figure 4. SP2 Termination Board Connections

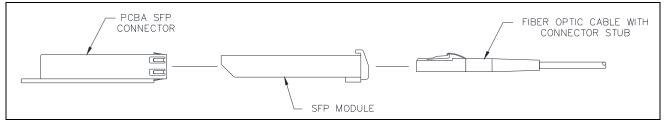


Figure 5. SP2 Fiber Optic Ethernet Connection

### Front Cover Installation

After all adjustments have been completed, place the front cover on the rear enclosure, being careful not to pinch any cables. Secure the front cover using the four screws and washers provided. Torque the screws to 10-12 lb·in (1.13-1.36 N·m).

## Warranty

**Equipment**. GAI-Tronics warrants for a period of one (1) year from the date of shipment, that any GAI-Tronics equipment supplied hereunder shall be free of defects in material and workmanship, shall comply with the then-current product specifications and product literature, and if applicable, shall be fit for the purpose specified in the agreed-upon quotation or proposal document. If (a) Seller's goods prove to be defective in workmanship and/or material under normal and proper usage, or unfit for the purpose specified and agreed upon, and (b) Buyer's claim is made within the warranty period set forth above, Buyer may return such goods to GAI-Tronics' nearest depot repair facility, freight prepaid, at which time they will be repaired or replaced, at Seller's option, without charge to Buyer. Repair or replacement shall be Buyer's sole and exclusive remedy. The warranty period on any repaired or replacement equipment shall be the greater of the ninety (90) day repair warranty or one (1) year from the date the original equipment was shipped. In no event shall GAI-Tronics warranty obligations with respect to equipment exceed 100% of the total cost of the equipment supplied hereunder. Buyer may also be entitled to the manufacturer's warranty on any third-party goods supplied by GAI-Tronics hereunder. The applicability of any such third-party warranty will be determined by GAI-Tronics.

**Services.** Any services GAI-Tronics provides hereunder, whether directly or through subcontractors, shall be performed in accordance with the standard of care with which such services are normally provided in the industry. If the services fail to meet the applicable industry standard, GAI-Tronics will re-perform such services at no cost to buyer to correct said deficiency to Company's satisfaction provided any and all issues are identified prior to the demobilization of the Contractor's personnel from the work site. Re-performance of services shall be Buyer's sole and exclusive remedy, and in no event shall GAI-Tronics warranty obligations with respect to services exceed 100% of the total cost of the services provided hereunder.

**Warranty Periods.** Every claim by Buyer alleging a defect in the goods and/or services provided hereunder shall be deemed waived unless such claim is made in writing within the applicable warranty periods as set forth above. Provided, however, that if the defect complained of is latent and not discoverable within the above warranty periods, every claim arising on account of such latent defect shall be deemed waived unless it is made in writing within a reasonable time after such latent defect is or should have been discovered by Buyer.

Limitations / Exclusions. The warranties herein shall not apply to, and GAI-Tronics shall not be responsible for, any damage to the goods or failure of the services supplied hereunder, to the extent caused by Buyer's neglect, failure to follow operational and maintenance procedures provided with the equipment, or the use of technicians not specifically authorized by GAI-Tronics to maintain or service the equipment. THE WARRANTIES AND REMEDIES CONTAINED HEREIN ARE IN LIEU OF AND EXCLUDE ALL OTHER WARRANTIES AND REMEDIES, WHETHER EXPRESS OR IMPLIED BY OPERATION OF LAW OR OTHERWISE, INCLUDING ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

# **Return Policy**

If the equipment requires service, contact your Regional Service Center for a return authorization number (RA#). Equipment should be shipped prepaid to GAI-Tronics with a return authorization number and a purchase order number. If the equipment is under warranty, repairs or a replacement will be made in accordance with the warranty policy set forth above. Please include a written explanation of all defects to assist our technicians in their troubleshooting efforts.

Call 800-492-1212 (inside the USA) or 610-777-1374 (outside the USA) for help identifying the Regional Service Center closest to you.